

Mi-T-M[®] CORPORATION

8650 Enterprise Drive, Peosta IA 52068

563-556-7484 / Fax 563-556-1235

PARTS LIST FOR ***CW-3255-4MV0***

Engine Oil Grade:

Above 40°F=SAE30

Below 40°F=SAE10W-30

Engine Oil Capacity:

56 oz.

Pump Oil Grade:

Mi-T-M Pump Oil #AW-4085-0016

Pump Oil Capacity:

40.6 oz.

Nozzle Size:

5.5

This Parts Listing has been compiled for your benefit. You can be assured your Mi-T-M Cold Water Pressure Washer was constructed and designed with quality and performance in mind using over 25 years experience in the pressure washer business. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Mi-T-M reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

- 1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine Mi-T-M parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
- 2. NEVER make adjustments on machinery while the unit is connected to the power source. Turning over the machinery by hand during adjustment or cleaning might start the machinery, causing serious injury to the operator.
- 3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
- 4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area.
- 5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

SPECIFICATIONS 3

FRAME ASSEMBLY FOR CW-3255-4MV0 4

PUMP ASSEMBLY (3-0202) 6

UNLOADER ASSEMBLY (8-0270) 8


GUN ASSEMBLY (16-0001) 10

SPECIFICATIONS

CW-3255-4MV0

MODEL NUMBER	CW-3255-4MV0
Operating Pressure (PSI/Bar):	3200/220.6
High Pressure Nozzle:	5.5
Water Volume (GPM/lpm):	4.9/18.5
Engine:	Briggs & Stratton
Horsepower	16.0
Engine Type	Four Stroke, Overhead Valve, Twin Cylinder
Oil Type	Above 40 F=SAE 30/Below 40 F=SAE10W-30
Oil Capacity (oz./liter)	56/1.7
Low Oil Protection	Oil Guard
Fuel Type	Unleaded Gasoline 86 Octane Minimum
Fuel Capacity (Qt./liter)	2.25/8.5
Starting	Recoil Rope/Electric Start
Maximum No Load RPM	3600 (+/- 100)
Pump:	Belt Driven, Oil Bath, Triplex Piston
Oil Type	Mi-T-M Pump Oil #AW-4085-0016
Oil Capacity (oz./liters)	40.6/1.2
Plungers	Ceramic Coated
Manifold	Forged Brass
Valves	Stainless Steel
Unloader	Preset
Heat Dump Valve	Relieves heated water during unloader bypass stage
Unit Net Weight (lbs/Kg)	250/113
Unit Shipping Weight (lbs/Kg)	328/149
Unit Net Dimension (in/cm)	46Lx28Wx30H/117Lx71Wx76H
Unit Shipping Dimension (in/cm)	49Lx30.5Wx35.5H/124Lx77.5Wx90H


FRAME ASSEMBLY FOR CW-3255-4MV0

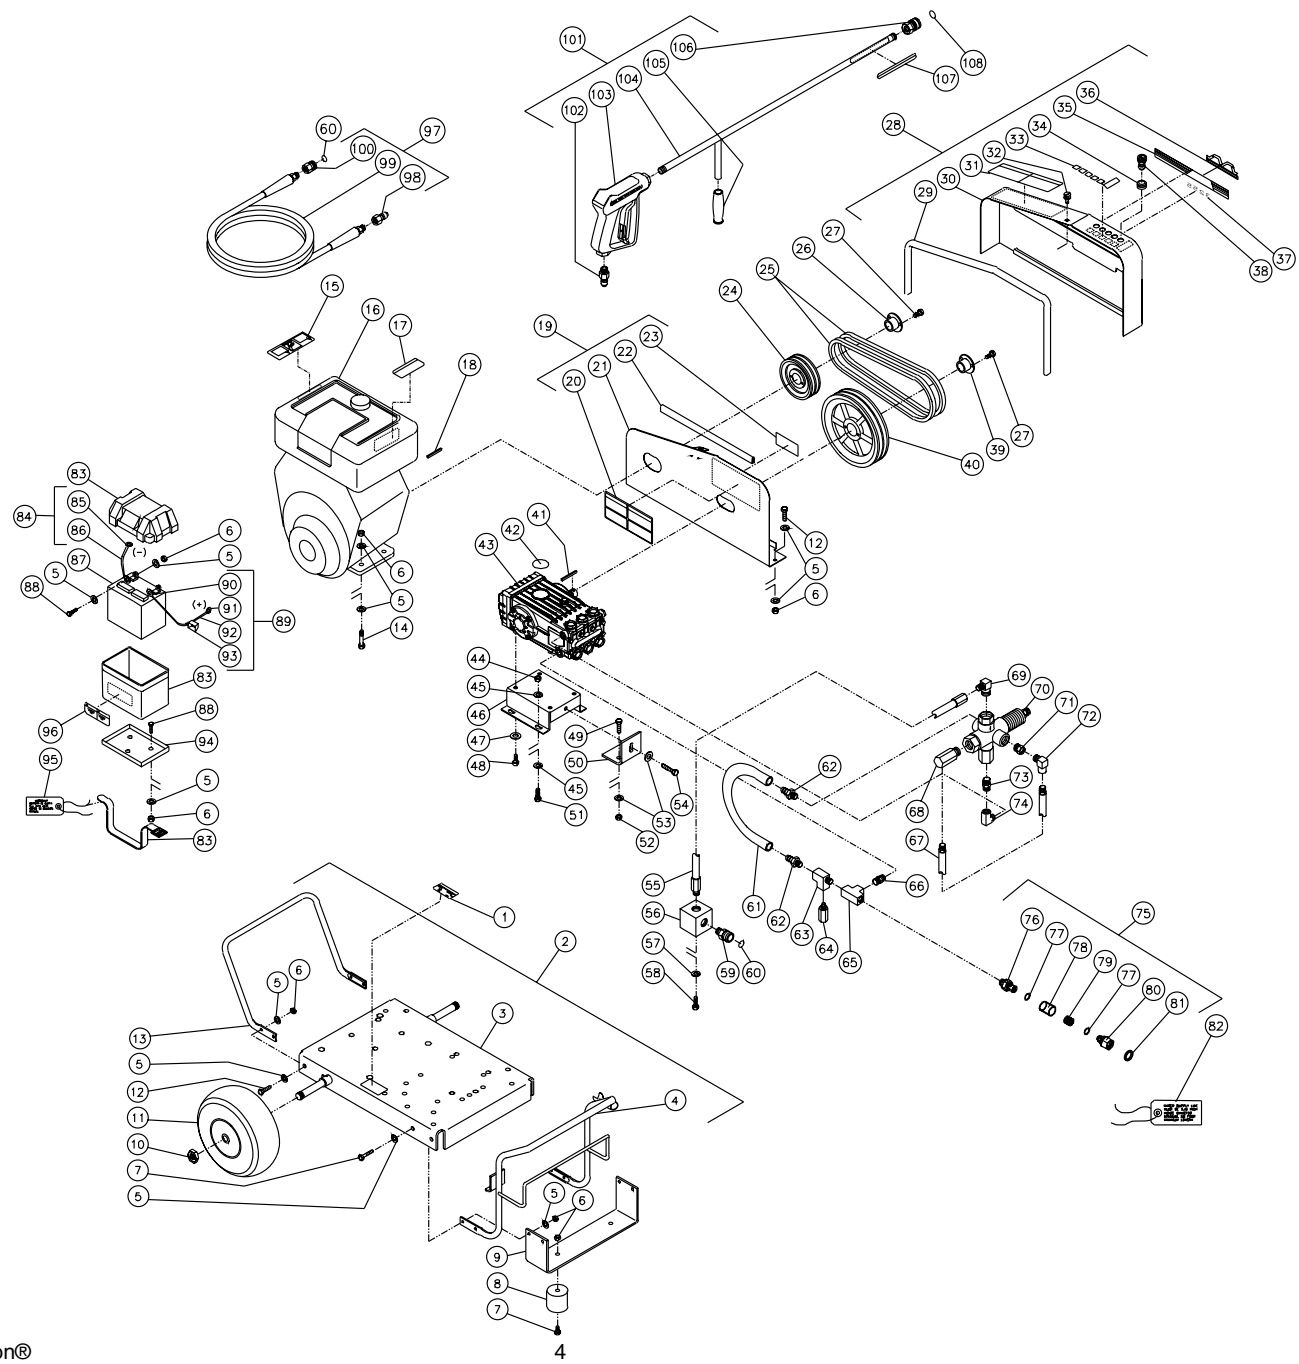

CW-3255-4MV0-090601-RD

FRAME ASSEMBLY FOR CW-3255-4MV0											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Decal- Data Plate	N/A	1	38	Spray Nozzle- 0005.5	18-0035	1	72	Elbow	23-0237	1
2	Base Plate Assembly (Inc. 3-13)	851-0235	1	-	Spray Nozzle- 1505.5	18-0041	1	73	Hex Nipple	24-0024	1
3	Base Plate	5-0078A01	1	-	Spray Nozzle- 2505.5	18-0062	1	74	Elbow	24-0105	1
4	Handle	7-0101A01	1	-	Spray Nozzle- 4005.5	18-0132	1	75	Filter Assembly (Inc. 76-81)	19-0206	1
5	Washer	28-0003	31	39	Bushing	9-0017	1	76	Filter Outlet-NPT (See 19-0206)	N/A Sep.	1
6	Locknut	30-0157	22	40	Sheave	10-0040	1	77	O-ring	25-0517	1
7	Bolt	27-0068	6	41	Key w/Pump	43-0048	1	78	Sight Glass	19-0208	1
8	Isolator	14-0008	2	42	Decal: Pump I.D. Number	N/A	1	79	Screen-Strainer	19-0209	1
9	Underbracket	13-0042A01	1	43	Pump	3-0202	1	80	Filter Inlet-Garden Hose (See 19-0206)	N/A Sep.	1
10	Jamnut	30-0117	2	44	Locknut	30-0161	4	81	Garden Hose Gasket	26-0001	1
11	Wheel	14-0006	2	45	Washer	28-0030	8	82	Tag- Water Supply Inlet	34-0097	1
12	Bolt	27-0067	8	46	Pump Bracket	5-0101A01	1	83	Battery Box	33-0092	1
13	Handle	7-0111A01	1	47	Washer w/Pump	29-0055	4	84	Battery Cable Assembly (Inc. 85-86)	851-0344	1
14	Bolt	27-0070	4	48	Bolt w/Pump	27-8471	4	85	Battery Terminal	32-0097	2
15	Decal- Warning: Muffler Hot (E/S)	34-0598	1	49	Bolt	27-0118	2	86	Battery Cable- Negative *(Two Feet Required)	32-0065	1
16	Engine- 16 H.P. Vanguard	851-0099	1	50	Brace Tightener	13-0003A01	1	87	Battery	32-0058	1
17	Decal- Caution: Allow to Cool (E/S)	34-0599	1	51	Bolt	27-0166	4	88	Bolt	27-0066	4
18	Key	43-0078	1	52	Locknut	30-0159	2	89	Battery Cable Assembly (Inc. 90-93)	851-0082	1
19	Beltguard Back Assembly (Inc. 20-23)	851-0215	1	53	Washer	28-0023	3	90	Battery Terminal	32-0097	1
20	Decal- Warning/Caution (E/S)	34-0812	1	54	Bolt	27-0576	1	91	Battery Terminal	32-0098	1
21	Beltguard Back (See 851-0215)	N/A Sep.	1	55	Hose	15-0141	1	92	Battery Cable *(Two Feet Required)	32-0065	1
22	Edging *(Two Feet Required)	33-0020	1	56	Manifold Block	51-0012	1	93	Battery Cable Cover	33-0004	1
23	Decal- Warning: Beltguard Cover (E/S)	34-0826	1	57	Washer	29-0008	2	94	Battery Retainer	20-0264A01	1
24	Sheave	10-0025	1	58	Bolt	27-0116	2	95	Tag- Battery	34-0096	1
25	Belt	11-0011	2	59	Quick Connect Socket	17-0029	1	96	Decal- Caution: Disconnect Battery (E/S)	34-0848	1
26	Bushing	9-0005	1	60	O-ring (Replacement Only)	25-0123	-	97	Pressure Hose Assembly (Inc. 98-100)	851-0006	1
27	Bolt w/Bushing	27-0015	4	61	By-Pass Hose	15-0022	1	98	Quick Connect Plug	17-0006	1
28	Beltguard Cover Assembly (Inc. 29-36)	851-0216	1	62	Hose Barb	23-0005	2	99	Pressure Hose Assembly	15-0004	1
29	Edging *(Four Feet Required)	33-0020	1	63	Tee	23-0124	1	100	Quick Connect Socket	17-0004	1
30	Beltguard Cover (See 851-0216)	N/A Sep.	1	64	Heat-Dump Valve	22-0005	1	101	Gun/Wand Assembly (Inc. 102-106)	851-0095	1
31	Decal- Operating Instructions (E/S)	34-0813	1	65	Tee	23-0043	1	102	Quick Connect Plug	17-0005	1
32	Fastener	33-0197	1	66	Hex Nipple	23-0012	1	103	Gun	16-0001	1
33	Decal- Die Cut Nozzles	34-0500	1	67	Hose	15-0140	1	104	Wand w/ 36" Handle	16-0120A01	1
34	Grommet	33-0001	5	68	Easy Start Valve	22-0146	1	105	Grip Handle	7-0002	1
35	Decal- Mi-T-M Stripe	34-0501	1	69	Elbow	24-0074	1	106	Quick Connect Socket	17-0001	1
36	Mi-T-M Logo	62-0086	1	70	Unloader	8-0270	1	107	Decal- Warning: Risk of Injection (E/S)	34-1253	1
37	Decal- Die Cut 3255	34-0365	1	71	Hex Reducer	23-0056	1	108	O-ring (Replacement Only)	25-0122	-
*Must Order in One Foot Lengths											

PUMP ASSEMBLY (3-0202)

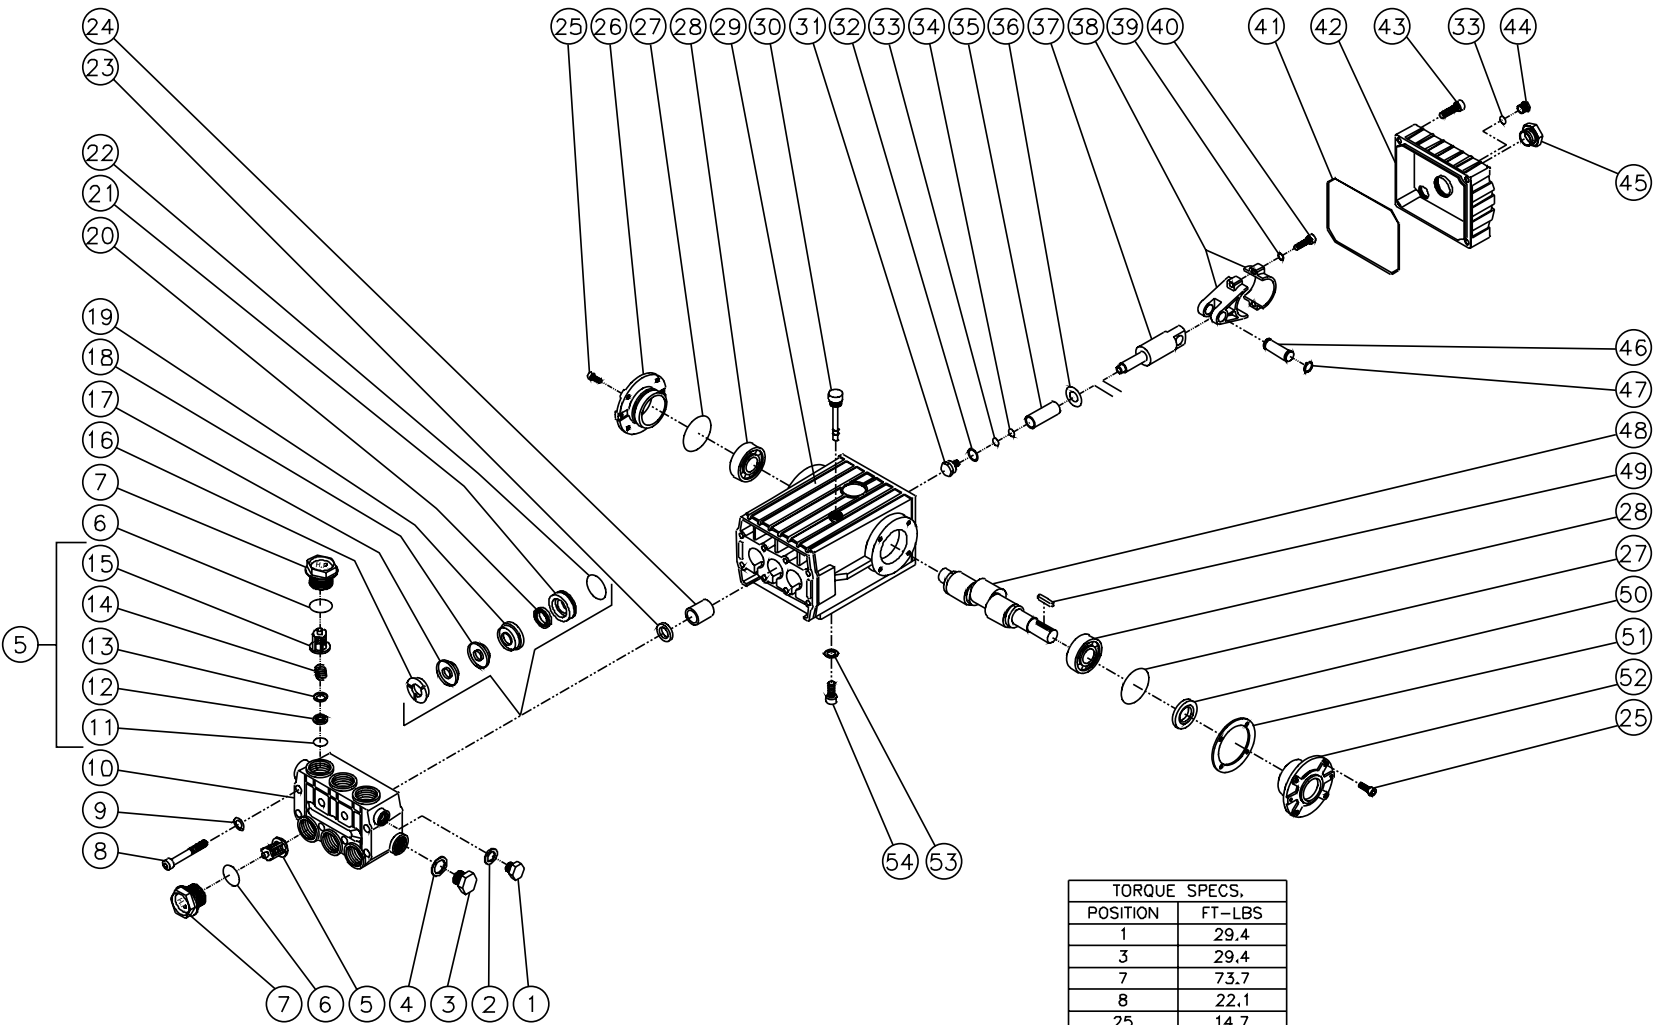


TORQUE SPECS.	
POSITION	FT-LBS
1	29.4
3	29.4
7	73.7
8	22.1
25	14.7
31	14.7
40	14.7
43	7.3
44	14.7
45	14.7
54	29.4

3-0202-092001-EDW

PUMP ASSEMBLY (3-0202)

REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Plug	39-0018	1	21	Low Pressure Seal Retainer	46-0887	3	41	O-ring Cover	25-0339	1
2	Washer	28-1002	1	22	O-ring	25-0015	3	42	Crankcase Cover	46-0295	1
3	Plug	39-0019	1	23	Oil Seal	26-0047	3	43	Bolt	27-8404	5
4	Washer	28-1038	1	24	Bushing	9-0029	3	44	Plug	39-0017	1
5	Valve Assembly (Inc. 11-15) (See 70-0009)	N/A Sep.	6	25	Bolt	27-8431	8	45	Oil Level Indicator	46-0114	1
6	O-ring	25-0012	6	26	Crankcase Cover	46-0336	1	46	Connecting Rod Pin	43-0032	3
7	Valve Plug	46-0889	6	27	O-ring	25-0013	2	47	Retaining Ring	46-0103	6
8	Bolt	27-8185	8	28	Bearing	48-0012	2	48	Crankshaft	46-0050	1
9	Flatwasher	28-1039	8	29	Crankcase	46-0292	1	49	Key	43-0048	1
10	Manifold	46-0890	1	30	Oil Dip Stick	46-0144	1	50	Oil Seal	26-0049	1
11	O-ring (See 70-0009)	N/A Sep.	6	31	Bolt	46-0069	3	51	Shim	46-0113	1
12	Valve Seat (See 70-0009)	N/A Sep.	6	32	Gasket	28-0400	3	52	Crankcase Open Cover	46-0296	1
13	Valve Plate (See 70-0009)	N/A Sep.	6	33	O-ring	25-0014	4	53	Lockwasher	29-0055	4
14	Valve Spring (See 70-0009)	N/A Sep.	6	34	Back-up Ring	46-0109	3	54	Bolt	27-8471	4
15	Valve Cage (See 70-0009)	N/A Sep.	6	35	Plunger	46-0052	3		Valve Assembly (6 each 5, 11-15)	70-0009	
16	High Pressure Head Ring (See 70-0030)	N/A Sep.	3	36	Washer	46-0146	3		Head Ring Kit (3 each 16)	70-0030	
17	High Pressure V-Packing (See 70-0299)	N/A Sep.	3	37	Piston Rod	46-0056	3		V-Packing Kit (3 each 17, 18, 20)	70-0299	
18	V-Packing Support (See 70-0299)	N/A Sep.	3	38	Connecting Rod	46-0051	3		Intermediate Retainer Kit (3 each 18, 19)	70-0148	
19	High Pressure Intermediate Seal Retainer	46-0659	3	39	Lockwasher	29-0154	6		Low Pressure Seal Kit (3 each 20-22)	70-0298	
20	Low Pressure Seal	46-0886	3	40	Bolt	27-8435	6		V-Packing Assembly (Inc. 16-22)	70-0300	


UNLOADER ASSEMBLY (8-0270)

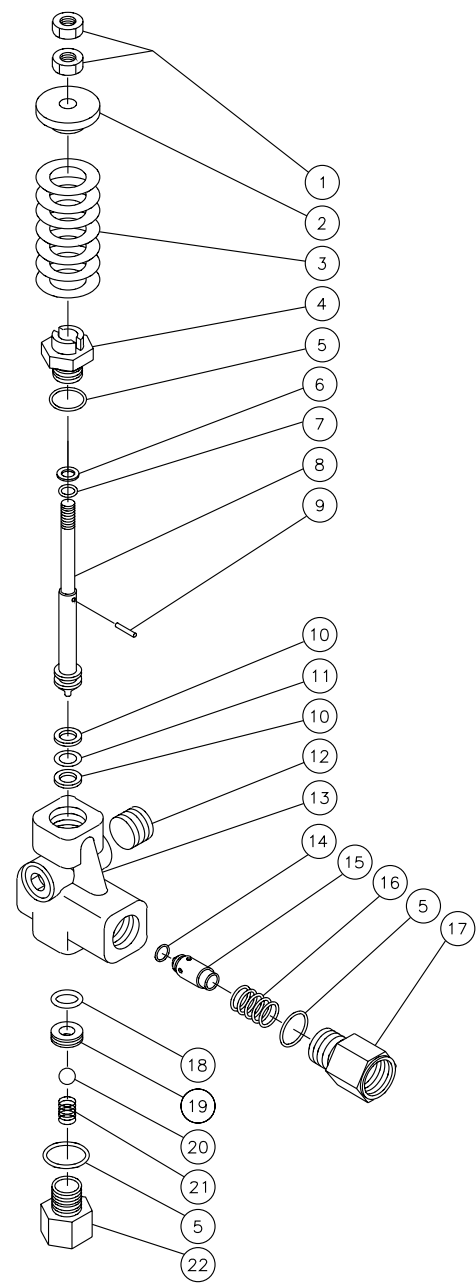

OMGEN043-083094-BAR

UNLOADER ASSEMBLY (8-0270)			
REF. #	DESCRIPTION	PART #	QTY.
1	Hex Nut	30-7203	2
2	Spring Guide	8-0278	1
3	Spring	49-0111	1
4	Piston Housing	8-0279	1
5	O-ring	25-0189	3
6	Back-up Ring	8-0277	1
7	O-ring	25-0192	1
8	Piston	8-0280	1
9	Pin	43-0059	1
10	Back-up Ring	8-0276	2
11	O-ring	25-0191	1
12	Plug	39-0055	2
13	Valve Housing	8-0275	1
14	O-ring	25-0193	1
15	Check Valve	22-0127	1
16	Spring	49-0058	1
17	Outlet Connection	8-0271	1
18	O-ring	25-0190	1
19	Seat	8-0272	1
20	Ball	8-0273	1
21	Spring	49-0059	1
22	Inlet Connection	8-0274	1
	Unloader Kit (5-7, 10, 11, 14, 18-20)	70-0107	1

GUN ASSEMBLY (16-0001)

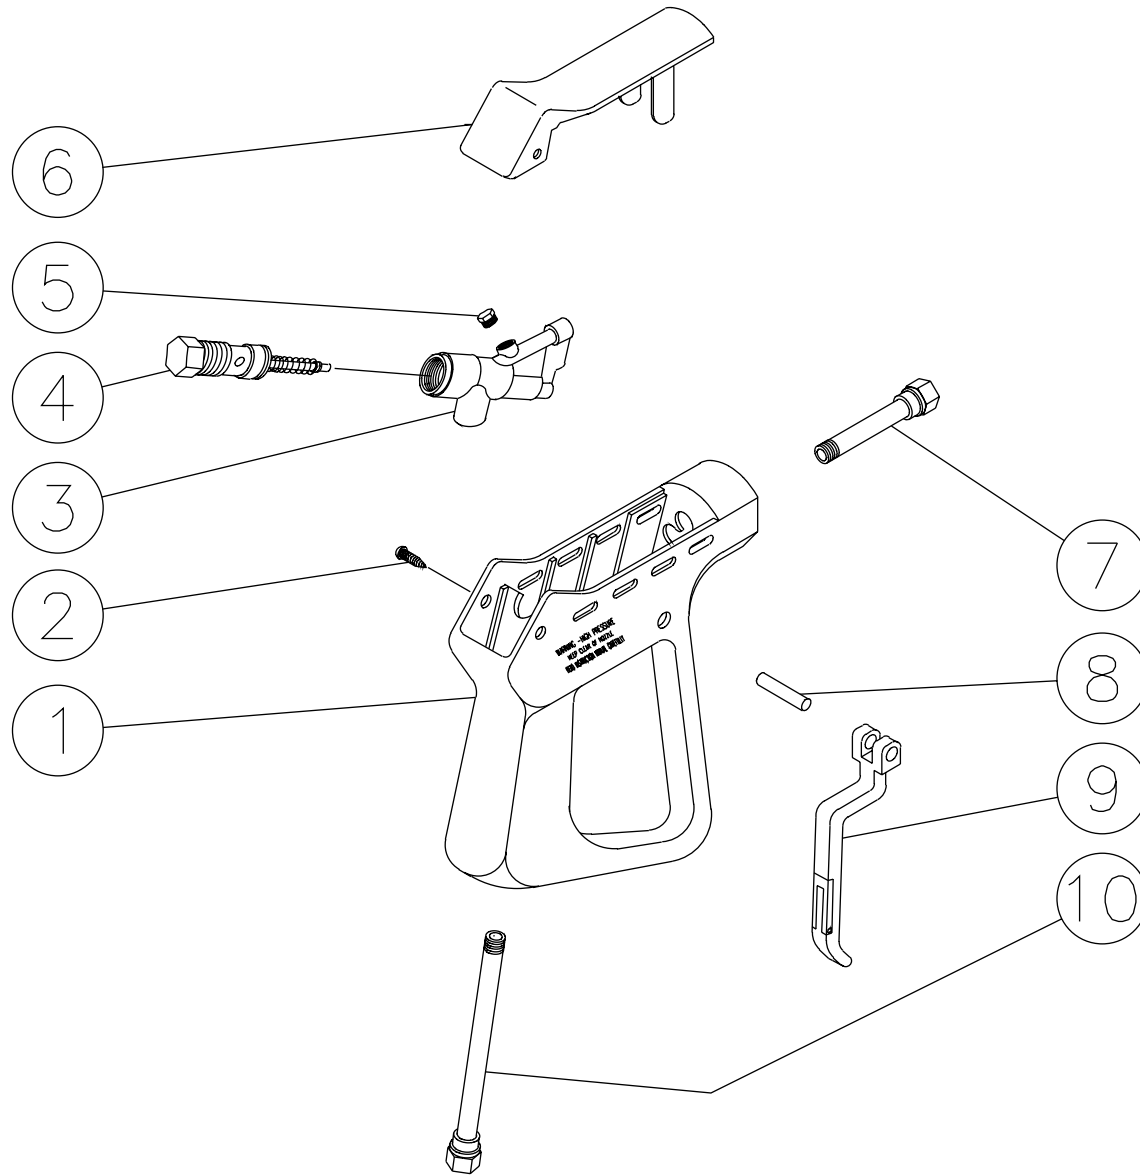

16-0001-110399-RD

GUN ASSEMBLY (16-0001)			
REF. #	DESCRIPTION	PART #	QTY.
1	Plastic Housing	16-0008	1
2	Screw	27-3230	2
3	Brass Housing	16-0012	1
4	Gun Repair Kit	70-0055	1
5	Brass Plug	39-0024	1
6	Plastic Cover	16-0009	1
7	Pipe Assembly	16-0013	1
8	Trigger Pin	16-0063	1
9	Trigger/Safety Lock-off	16-0010	1
10	Pipe Assembly- Inlet	16-0016	1
	Complete Gun Assembly	16-0001	1

