

Mi-T-M[®] CORPORATION

8650 Enterprise Drive, Peosta IA 52068

319-556-7484 / Fax 319-556-1235

PARTS LIST FOR CWC-4005-0MGH/0MGV CWC-5004-0MGH/0MGV

ENGINE OIL GRADE:

HONDA:

VANGUARD:

SAE10W-30

ABOVE 40°F=SAE30

BELOW 40°F=SAE10W-30

ENGINE OIL CAPACITY:

54 oz.

PUMP OIL GRADE:

Mi-T-M #AW-4085-0016

PUMP OIL CAPACITY:

40.6 oz.

PRESSURE NOZZLE SIZE FOR

CWC-4005-0MGH/GV

5.0

CWC-5004-0MGH/GV

3.5

This Parts Listing has been compiled for your benefit. You can be assured your Mi-T-M Cold Water Pressure Washer was constructed and designed with quality and performance in mind using over 25 years experience in the pressure washer business. Each component has been rigorously tested to insure the highest level of acceptance.

The contents of this Parts Listing are based on the latest product information available at the time of publication. Mi-T-M reserves the right to make changes in price, color, materials, equipment, specifications or models at any time without notice.

WARNING

THIS IS A PROFESSIONAL HIGH PRESSURE, COLD WATER PRESSURE WASHER. CAUTION SHOULD BE OBSERVED WHEN USING OR REPAIRING THIS UNIT! READ AND FOLLOW THE SAFETY WARNINGS LISTED BELOW BEFORE ATTEMPTING ANY REPAIRS ON THIS PRESSURE WASHER!

SAFETY WARNINGS

1. NEVER alter or modify the equipment. Be sure any accessory items and system components being used will withstand the pressure developed. Use only genuine Mi-T-M parts for repair of your pressure washer. Failure to do so can cause hazardous operating conditions and will VOID warranty.
2. NEVER make adjustments on machinery while the unit is connected to the power source. Turning over the machinery by hand during adjustment or cleaning might start the machinery, causing serious injury to the operator.
3. Know how to stop and bleed pressures quickly. Be thoroughly familiar with controls.
4. Before servicing the unit, turn unit off, relieve the water pressure and allow the unit to cool down. Do not make repairs while the unit is running. Service in a clean, dry, flat area.
5. After testing the machine, DO NOT leave the pressurized unit unattended. Shut off the unit and release trapped pressure before leaving.

Table of Contents

SPECIFICATIONS FOR CWC-4005-0MGH/0MGV	4
SPECIFICATIONS FOR CWC-5004-0MGH/0MGV	5
FRAME ASSEMBLY FOR CWC-4005-0MGH/0MGV	6
FRAME ASSEMBLY FOR CWC-5004-0MGH/0MGV	8
PUMP ASSEMBLY (3-0169)	10
UNLOADER ASSEMBLY (8-0480)	12
BURST DISK ASSEMBLY (850-0308)	14
EASY START VALVE (22-0242)	15
GUN ASSEMBLY (16-0343)	16
VANGUARD ENGINE ASSEMBLY (851-0318)	18
WIRING SCHEMATIC FOR HONDA ENGINE	20
WIRING DIAGRAM FOR HONDA ENGINE	21
WIRING SCHEMATIC FOR VANGUARD ENGINES	22
WIRING DIAGRAM FOR VANGUARD ENGINES	23

SPECIFICATIONS FOR CWC-4005-0MGH/0MGV

CWC-4005-0MGH/V


MODEL NUMBER	CWC-4005-0MGH	CWC-4005-0MGV
Operating Pressure (PSI/Bar):	4000/276	
High Pressure Nozzle:	5.0	
Water Volume (GPM/lpm):	5.0/18.9	
Engine:	Honda	Briggs & Stratton Vanguard
Horsepower	20.0	
Engine Type	4 Stroke, Overhead Valve, Single Cylinder	
Oil Type	SAE10W-30	Above 40 F = SAE30/Below 40 F = SAE10W-30
Oil Capacity (oz./liter)	54/1.6	
Low Oil Protection	Oil Alert	Oil Guard
Fuel Type	Unleaded Gasoline 86 Octane Minimum	
Fuel Capacity (gal./liter)	11.5/43.5	
Starting	Recoil	
Maximum No Load RPM	3600 (+/- 100) RPM	
Heat Dump Valve	Relieves heated water during unloader bypass stage	
Pump:	Direct Driven, Oil Bath, Triplex Piston	
Oil Type	Mi-T-M Pump Oil #AW-4085-0016	
Oil Capacity (oz./liters)	40.6/1.2	
Plungers	Ceramic	
Manifold	Forged Brass	
Valves	Stainless Steel	
Unloader	Preset	
Unit Net Weight (lbs/Kg)	378/171.5	363/165
Unit Shipping Weight (lbs/Kg)	501/227	486/220.5
Unit Net Dimension (cm)	43Lx23.75Wx36H/109Lx70.5Wx91.5H	
Unit Shipping Dimension (cm)	46.5Lx31.5Wx48.5H/118Lx80Wx123H	

SPECIFICATIONS FOR CWC-5004-0MGH/0MGV

CWC-5004-0MGH/V

MODEL NUMBER	CWC-5004-0MGH	CWC-5004-0MGV
Operating Pressure (PSI/Bar):	5000/344.7	
High Pressure Nozzle:	3.5	
Water Volume (GPM/lpm):	4.0/15.1	
Engine:	Honda	Briggs & Stratton Vanguard
Horsepower	20.0	
Engine Type	4 Stroke, Overhead Valve, Single Cylinder	
Oil Type	SAE10W-30	Above 40 F = SAE30/Below 40 F = SAE10W-30
Oil Capacity (oz./liter)	54/1.6	
Low Oil Protection	Oil Alert	Oil Guard
Fuel Type	Unleaded Gasoline 86 Octane Minimum	
Fuel Capacity (gal./liter)	11.5/43.5	
Starting	Recoil	
Maximum No Load RPM	3600 (+/- 100) RPM	
Heat Dump Valve	Relieves heated water during unloader bypass stage	
Pump:	Direct Driven, Oil Bath, Triplex Piston	
Oil Type	Mi-T-M Pump Oil #AW-4085-0016	
Oil Capacity (oz./liters)	40.6/1.2	
Plungers	Ceramic	
Manifold	Forged Brass	
Valves	Stainless Steel	
Unloader	Preset	
Unit Net Weight (lbs/Kg)	378/171.5	363/165
Unit Shipping Weight (lbs/Kg)	501/227	486/220.5
Unit Net Dimension (cm)	43Lx23.75Wx36H/109Lx70.5Wx91.5H	
Unit Shipping Dimension (cm)	46.5Lx31.5Wx48.5H/118Lx80Wx123H	


FRAME ASSEMBLY FOR CWC-4005-0MGH/OMGV

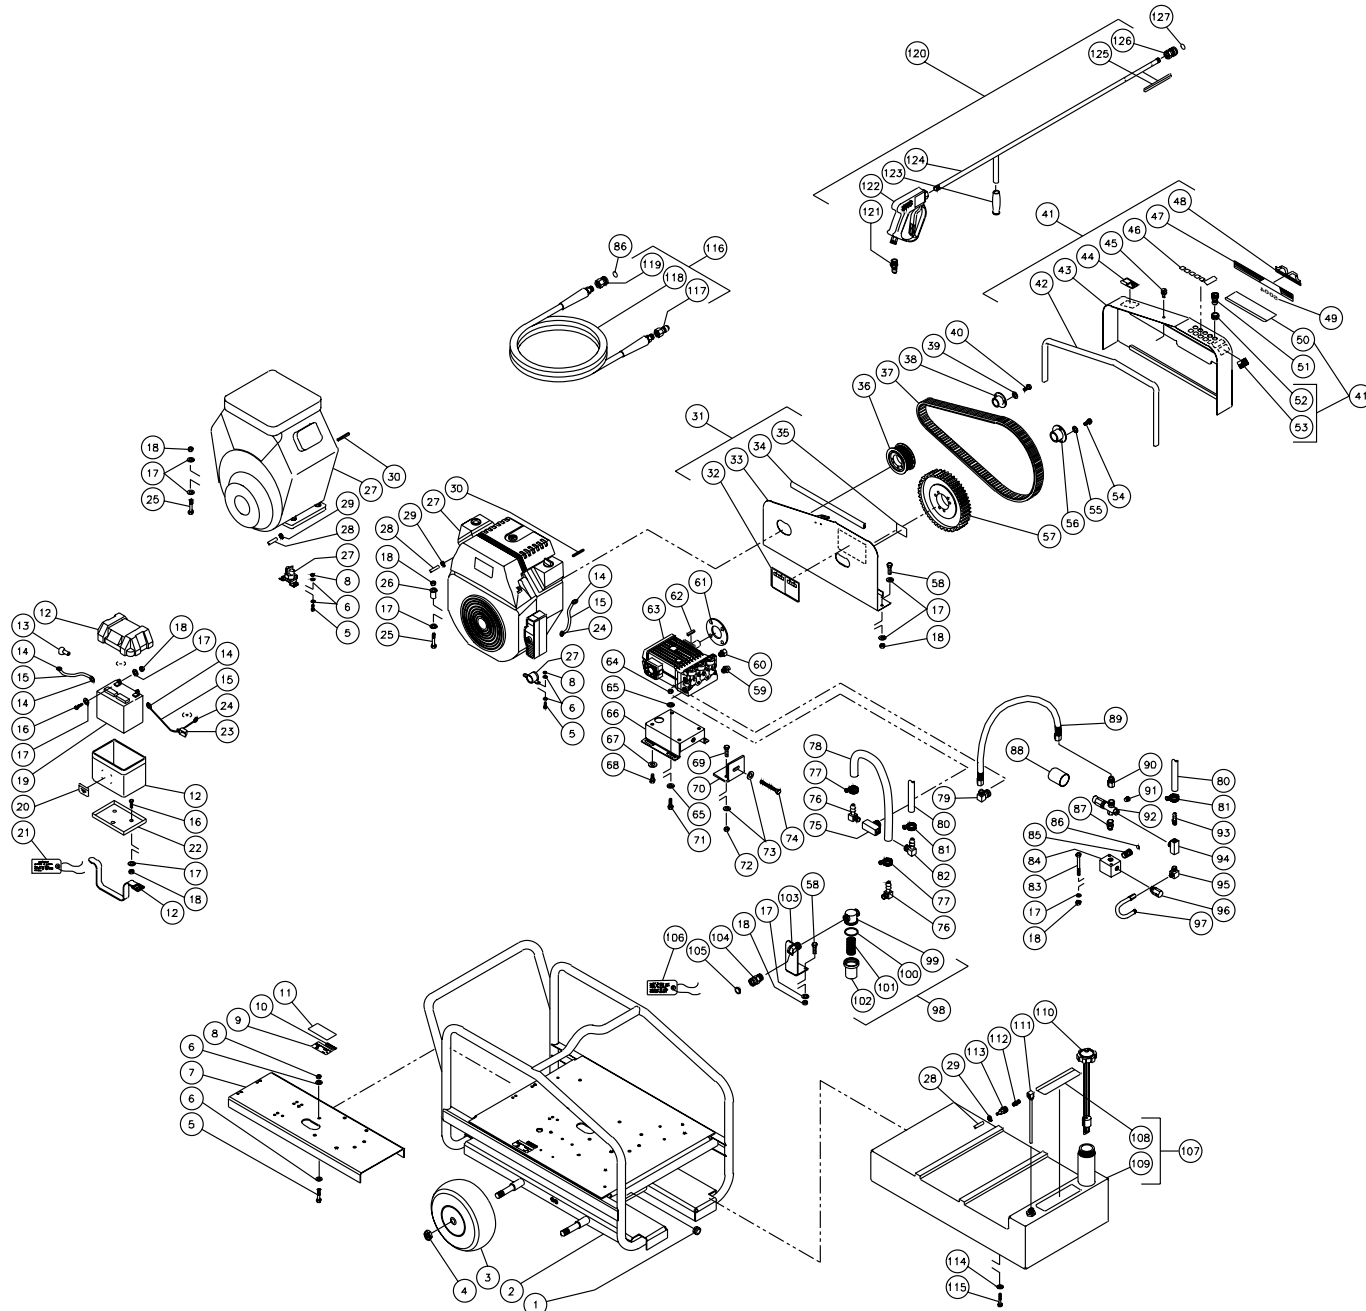

CWC-4005-0MGH/V-041200-RD

FRAME ASSEMBLY FOR CWC-4005-0MGH/GV														
REF. #	DESCRIPTION	PART #	QTY. OMGH	QTY. OMGV	REF. #	DESCRIPTION	PART #	QTY. OMGH	QTY. OMGV	REF. #	DESCRIPTION	PART #	QTY. OMGH	QTY. OMGV
1	Grommet	33-0002	2	2	42	Edging *(Four Feet Required)	33-0020	1	1	84	Manifold Block	51-0020	1	1
2	Frame Assembly	5-0136A01	1	1	43	Beltguard Cover (See 851-0311)	N/A Sep.	1	1	85	Quick Connect Socket	17-0007	1	1
3	Wheel	14-0006	4	4	44	Decal- Warning: Muffler Hot (E/S)	34-0598	1	1	86	O-ring (Replacement Only)	25-0123	-	-
4	Jamnut	30-0117	4	4	45	Fastener	33-0197	1	1	87	Nipple	24-0010	1	1
5	Bolt	27-0016	3	3	46	Decal- Die Cut Nozzles	34-0500	1	1	88	Heat Shrink Tubing *(One Foot Required)	33-0272	1	1
6	Washer	28-0021	6	6	47	Decal- Mi-T-M Stripe	34-0501	1	1	89	High Pressure Cross-Over Hose	15-0177	1	1
7	Support Bracket	13-0120A01	1	1	48	Mi-T-M Logo	62-0086	1	1	90	Adapter	24-0150	1	1
8	Nut	30-0155	3	3	49	Decal- Die Cut 4005	34-0833	1	1	91	Plug	39-0017	1	1
9	Decal- Data Plate	N/A	1	1	50	Decal- Operating Instructions (E/S)	34-0813	1	1	92	Unloader	8-0480	1	1
10	Decal- Serial Number	N/A	1	1	51	Spray Nozzle- 0005	18-0003	1	1	93	Barb	23-0105	1	1
11	Decal- Clear Laminate	N/A	1	1	-	Spray Nozzle- 1505	18-0004	1	1	94	Branch	23-0117	1	1
12	Battery Box	33-0092	1	1	-	Spray Nozzle- 2505	18-0153	1	1	95	Elbow	23-0324	1	1
13	Terminal Protector	33-0273	1	1	-	Spray Nozzle- 4005	18-0180	1	1	96	Valve	22-0242	1	1
14	Terminal Ring	32-0097	4	3	52	Grommet	33-0001	5	5	97	Hose Barb	15-0140	1	1
15	Cable (Neg.) *(Two Feet Required)	32-0065	1	1	53	Decal- American Flag	34-0521	1	1	98	Strainer Assembly (Inc. 99-102, 104)	19-0057	1	1
-	Cable (Pos.) *(Two Feet Required)	32-0065	1	1	54	Bolt	27-0071	3	3	99	Strainer Cap	19-0058	1	1
-	Cable *(One Foot Required)	32-0065	1	-	55	Lockwasher	28-0003	3	3	100	Strainer Gasket	26-0160	1	1
16	Bolt	27-0066	4	4	56	Bushing	9-0066	1	1	101	Strainer Screen	19-0059	1	1
17	Washer	28-0003	24	28	57	Sprocket	10-0085	1	1	102	Strainer Bowl	19-0060	1	1
18	Nut	30-0157	16	16	58	Bolt	27-0067	6	6	103	Bracket	20-0428A01	1	1
19	Battery	32-0058	1	1	59	Relief Valve	22-0005	1	1	104	Garden Hose Swivel	23-0095	1	1
20	Decal- Caution: Disconnect Battery	34-0589	1	1	60	Burst Disk Assembly	851-0308	1	1	105	Garden Hose Gasket	26-0001	1	1
21	Tag- Battery	34-0096	1	1	61	Isolator	33-0202	1	1	106	Tag- Water Inlet Supply	34-0097	1	1
22	Battery Retainer	20-0264A01	1	1	62	Key w/Pump	43-0028	1	1	107	Fuel Tank Assembly (Inc. 108, 109)	851-0319	1	1
23	Terminal Protector	33-0004	1	1	63	Pump	3-0169	1	1	108	Decal- Caution: Gas Only (E/S)	34-0835	1	1
24	Terminal Ring	32-0098	2	1	64	Locknut	30-0161	4	4	109	Fuel Tank (See 851-0319)	N/A Sep.	1	1
25	Bolt	27-0071	4	4	65	Washer	28-0030	8	8	110	Fuel Cap w/Guage	12-0061	1	1
26	Shim	33-0169	4	-	66	Pump Bracket	5-0101A01	1	1	111	Fuel Pick-up	33-0271	1	1
27	Motor Assembly	851-0307	1	-	67	Washer w/Pump	29-0055	4	4	112	Quick Connect Plug	17-0038	1	1
-	Motor Assembly	851-0318	-	1	68	Bolt w/Pump	27-8471	4	4	113	Quick Connect Socket	17-0018	1	1
28	Fuel Line *(Four Feet Required)	15-0031	1	-	69	Bolt	27-0118	2	2	114	Washer	28-0022	4	4
-	Fuel Line *(Three Feet Required)	15-0031	-	1	70	Brace Tightner	13-0003A01	1	1	115	Bolt	27-9524	4	4
29	Hose Clamp	42-0004	2	2	71	Bolt	27-0167	4	4	116	Pressure Hose Assembly (Inc. 117-119)	851-0006	1	1
30	Key	43-0078	1	1	72	Locknut	30-0159	2	2	117	Quick Connect Plug	17-0006	1	1
31	Beltguard Back Assembly (Inc. 32-35)	851-0310	1	1	73	Washer	28-0023	3	3	118	Pressure Hose	15-0004	1	1
32	Decal- Warning/Caution (E/S)	34-0812	1	1	74	Bolt	27-0576	1	1	119	Quick Connect Socket	17-0004	1	1
33	Beltguard Back (See 851-0310)	N/A Sep.	1	1	75	Branch *T	23-0235	1	1	120	Gun/Lance Assembly (Inc. 121-126)	851-0309	1	1
34	Edging *(Two Feet Required)	33-0020	1	1	76	Elbow	23-0037	1	1	121	Quick Connect Plug	17-0005	1	1
35	Decal- Warning: Beltguard (E/S)	34-0826	1	1	77	Clamp	42-0003	2	2	122	Gun	16-0343	1	1
36	Sprocket	10-0084	1	1	78	Hose *(Two Feet Required)	15-0033	1	1	123	Grip Handle	7-0002	1	1
37	Belt	11-0041	1	1	79	Elbow	24-0092	1	1	124	Lance	16-0342A01	1	1
38	Bushing	9-0064	1	1	80	Hose *(Three Feet Required)	15-0007	1	1	125	Decal- Warning: Risk of Injection (English Only)	34-0572	1	1
39	Lockwasher	28-0021	3	3	81	Clamp	42-0011	2	2	126	Quick Connect	17-0036	1	1
40	Bolt	27-0037	3	3	82	Elbow	23-0053	1	1	127	O-ring (Replacement Only)	25-0122	-	-
41	Beltguard Cover Assembly (Inc. 42-48, 50, 52, 53)	851-0311	1	1	83	Bolt	27-0074	2	2	*Must Order in One Foot Lengths				


FRAME ASSEMBLY FOR CWC-5004-0MGH/0MGV

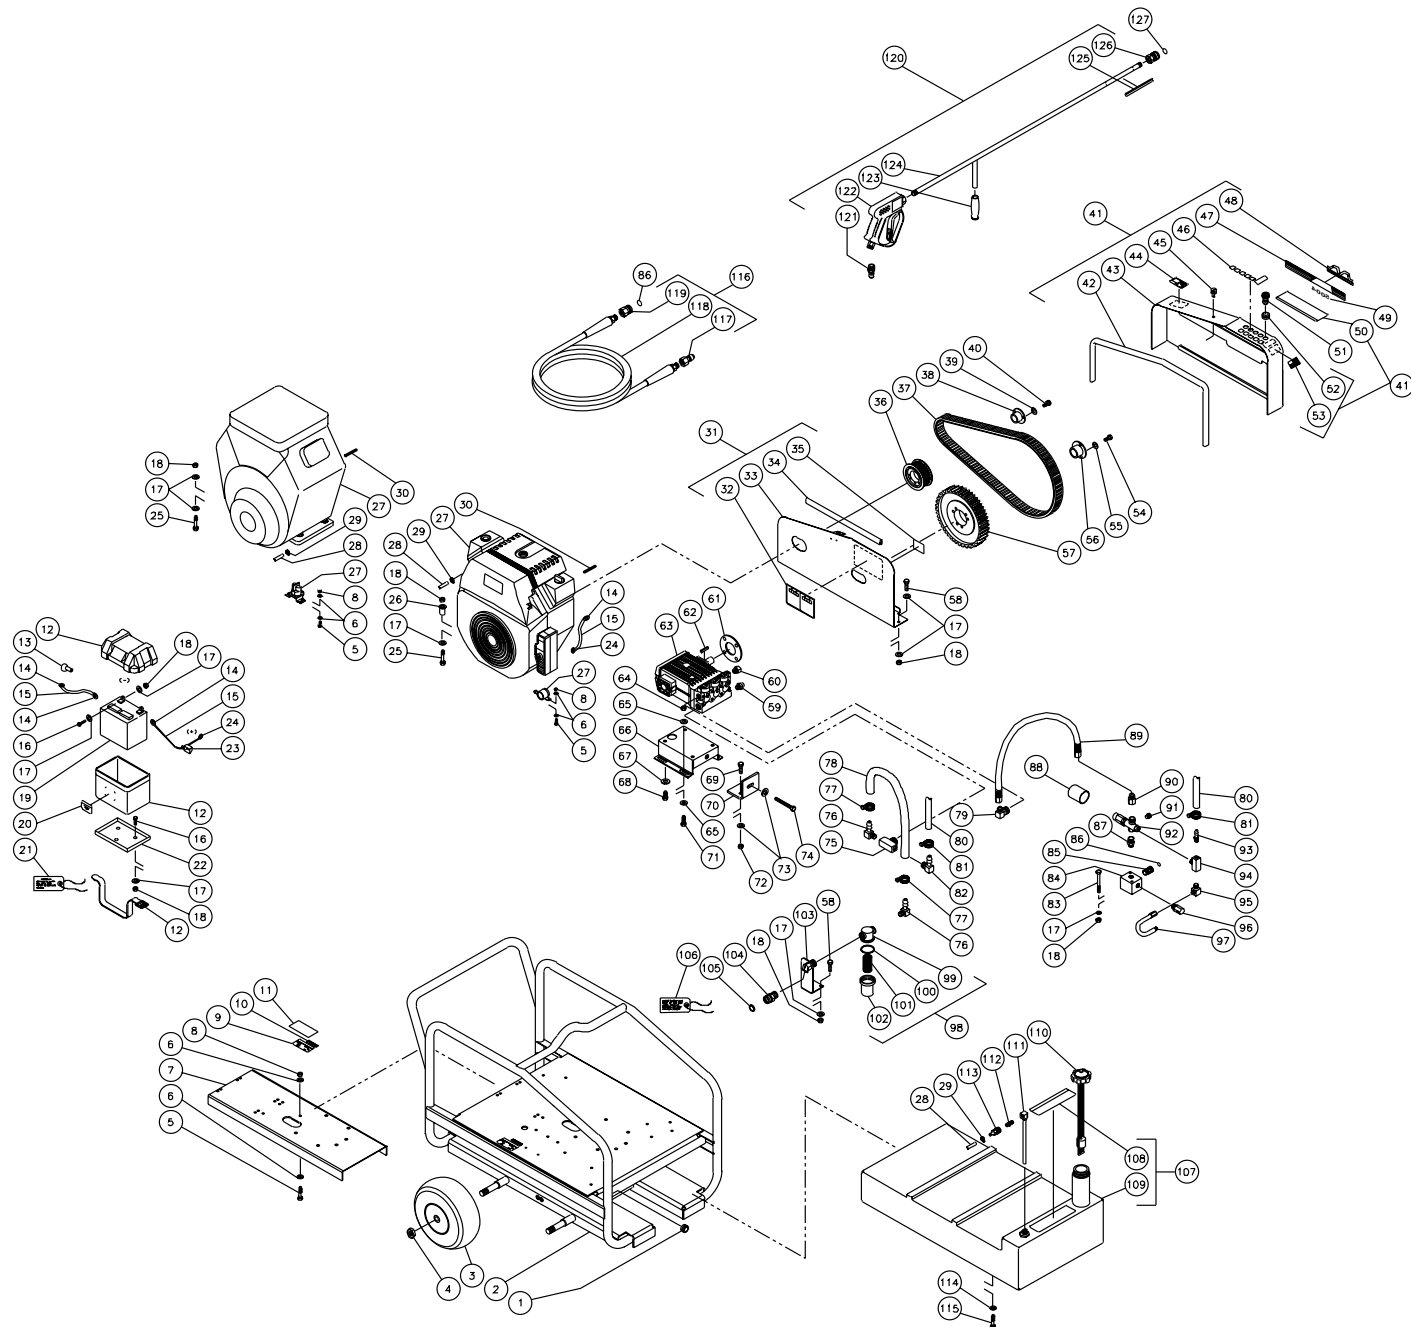

CWC-5004-0MGH/V-041200-RD

FRAME ASSEMBLY FOR CWC-5004-OMGH/GV														
REF. #	DESCRIPTION	PART #	QTY. OMGH	QTY. OMGV	REF. #	DESCRIPTION	PART #	QTY. OMGH	QTY. OMGV	REF. #	DESCRIPTION	PART #	QTY. OMGH	QTY. OMGV
1	Grommet	33-0002	2	2	42	Edging *(Four Feet Required)	33-0020	1	1	84	Manifold Block	51-0020	1	1
2	Frame Assembly	5-0136A01	1	1	43	Beltguard Cover (See 851-0311)	N/A Sep.	1	1	85	Quick Connect Socket	17-0007	1	1
3	Wheel	14-0006	4	4	44	Decal- Warning: Muffler Hot (E/S)	34-0598	1	1	86	O-ring (Replacement Only)	25-0123	-	-
4	Jamnut	30-0117	4	4	45	Fastener	33-0197	1	1	87	Nipple	24-0010	1	1
5	Bolt	27-0016	3	3	46	Decal- Die Cut Nozzles	34-0500	1	1	88	Heat Shrink Tubing *(One Foot Lengths)	33-0272	1	1
6	Washer	28-0021	6	6	47	Decal- Mi-T-M Stripe	34-0501	1	1	89	High Pressure Coss-Over Hose	15-0177	1	1
7	Support Bracket	13-0120A01	1	1	48	Mi-T-M Logo	62-0086	1	1	90	Adapter	24-0150	1	1
8	Nut	30-0155	3	3	49	Decal- Die Cut 5004	34-0834	1	1	91	Plug	39-0017	1	1
9	Decal- Data Plate	N/A	1	1	50	Decal- Operating Instructions (E/S)	34-0813	1	1	92	Unloader	8-0480	1	1
10	Decal- Serial Number	N/A	1	1	51	Spray Nozzle- 0003.5	18-0257	1	1	93	Barb	23-0105	1	1
11	Decal- Clear Laminate	N/A	1	1	-	Spray Nozzle- 1503.5	18-0258	1	1	94	Branch	23-0117	1	1
12	Battery Box	33-0092	1	1	-	Spray Nozzle- 2503.5	18-0259	1	1	95	Elbow	23-0324	1	1
13	Terminal Protector	33-0273	1	1	-	Spray Nozzle- 4003.5	18-0260	1	1	96	Valve	22-0242	1	1
14	Terminal Ring	32-0097	4	3	52	Grommet	33-0001	5	5	97	Hose Barb	15-0140	1	1
15	Cable (Neg.) *(Two Feet Required)	32-0065	1	1	53	Decal- American Flag	34-0521	1	1	98	Strainer Assembly (Inc. 99-102, 104)	19-0057	1	1
-	Cable (Pos.) *(Two Feet Required)	32-0065	1	1	54	Bolt	27-0071	3	3	99	Strainer Cap	19-0058	1	1
-	Cable *(One Foot Required)	32-0065	1	-	55	Lockwasher	28-0003	3	3	100	Strainer Gasket	26-0160	1	1
16	Bolt	27-0066	4	4	56	Bushing	9-0066	1	1	101	Strainer Screen	19-0059	1	1
17	Washer	28-0003	24	28	57	Sprocket	10-0086	1	1	102	Strainer Bowl	19-0060	1	1
18	Nut	30-0157	16	16	58	Bolt	27-0067	6	6	103	Bracket	20-0428A01	1	1
19	Battery	32-0058	1	1	59	Relief Valve	22-0005	1	1	104	Garden Hose Swivel	23-0095	1	1
20	Decal- Caution: Disconnect Battery	34-0589	1	1	60	Burst Disk Assembly	851-0308	1	1	105	Garden Hose Gasket	26-0001	1	1
21	Tag- Battery	34-0096	1	1	61	Isolator	33-0202	1	1	106	Tag- Water Inlet Supply	34-0097	1	1
22	Battery Retainer	20-0264A01	1	1	62	Key w/Pump	43-0028	1	1	107	Fuel Tank Assembly (Inc. 108, 109)	851-0319	1	1
23	Terminal Protector	33-0004	1	1	63	Pump	3-0169	1	1	108	Decal- Caution: Gas Only (E/S)	34-0835	1	1
24	Terminal Ring	32-0098	2	1	64	Locknut	30-0161	4	4	109	Fuel Tank (See 851-0319)	N/A Sep.	1	1
25	Bolt	27-0071	4	-	65	Washer	28-0030	8	8	110	Fuel Cap w/Guage	12-0061	1	1
26	Shim	33-0169	4	4	66	Pump Bracket	5-0101A01	1	1	111	Fuel Pick-up	33-0271	1	1
27	Motor Assembly	851-0307	1	-	67	Washer w/Pump	29-0055	4	4	112	Quick Connect Plug	17-0038	1	1
-	Motor Assembly	851-0318	-	1	68	Bolt w/Pump	27-8471	4	4	113	Quick Connect Socket	17-0018	1	1
28	Fuel Line *(Four Feet Required)	15-0031	1	-	69	Bolt	27-0118	2	2	114	Washer	28-0022	4	4
-	Fuel Line *(Three Feet Required)	15-0031	-	1	70	Brace Tightner	13-0003A01	1	1	115	Bolt	27-9524	4	4
29	Hose Clamp	42-0004	2	2	71	Bolt	27-0167	4	4	116	Pressure Hose Assembly (Inc. 117-119)	851-0317	1	1
30	Key	43-0078	1	1	72	Locknut	30-0159	2	2	117	Quick Connect Plug	17-0006	1	1
31	Beltguard Back Assembly (Inc. 32-35)	851-0310	1	1	73	Washer	28-0023	3	3	118	Pressure Hose	15-0178	1	1
32	Decal- Warning/Caution (E/S)	34-0812	1	1	74	Bolt	27-0576	1	1	119	Quick Connect Socket	17-0004	1	1
33	Beltguard Back (See 851-0310)	N/A Sep.	1	1	75	Branch "T"	23-0235	1	1	120	Gun/Lance Assembly (Inc. 121-126)	851-0309	1	1
34	Edging *(Two Feet Required)	33-0020	1	1	76	Elbow	23-0037	1	1	121	Quick Connect Plug	17-0005	1	1
35	Decal- Warning: Beltguard (E/S)	34-0826	1	1	77	Clamp	42-0003	2	2	122	Gun	16-0343	1	1
36	Sprocket	10-0084	1	1	78	Hose *(Two Feet Required)	15-0033	1	1	123	Grip Handle	7-0002	1	1
37	Belt	11-0042	1	1	79	Elbow	24-0092	1	1	124	Lance	16-0342A01	1	1
38	Bushing	9-0064	1	1	80	Hose *(Three Feet Required)	15-0007	1	1	125	Decal- Warning: Risk of Injection (English Only)	34-0572	1	1
39	Lockwasher	28-0021	3	3	81	Clamp	42-0011	2	2	126	Quick Connect	17-0036	1	1
40	Bolt	27-0037	3	3	82	Elbow	23-0053	1	1	127	O-ring (Replacement Only)	25-0122	-	-
41	Beltguard Cover Assembly (Inc. 42-48, 50, 52, 53)	851-0311	1	1	83	Bolt	27-0074	2	2	*Must Order in One Foot Lengths				


PUMP ASSEMBLY (3-0169)

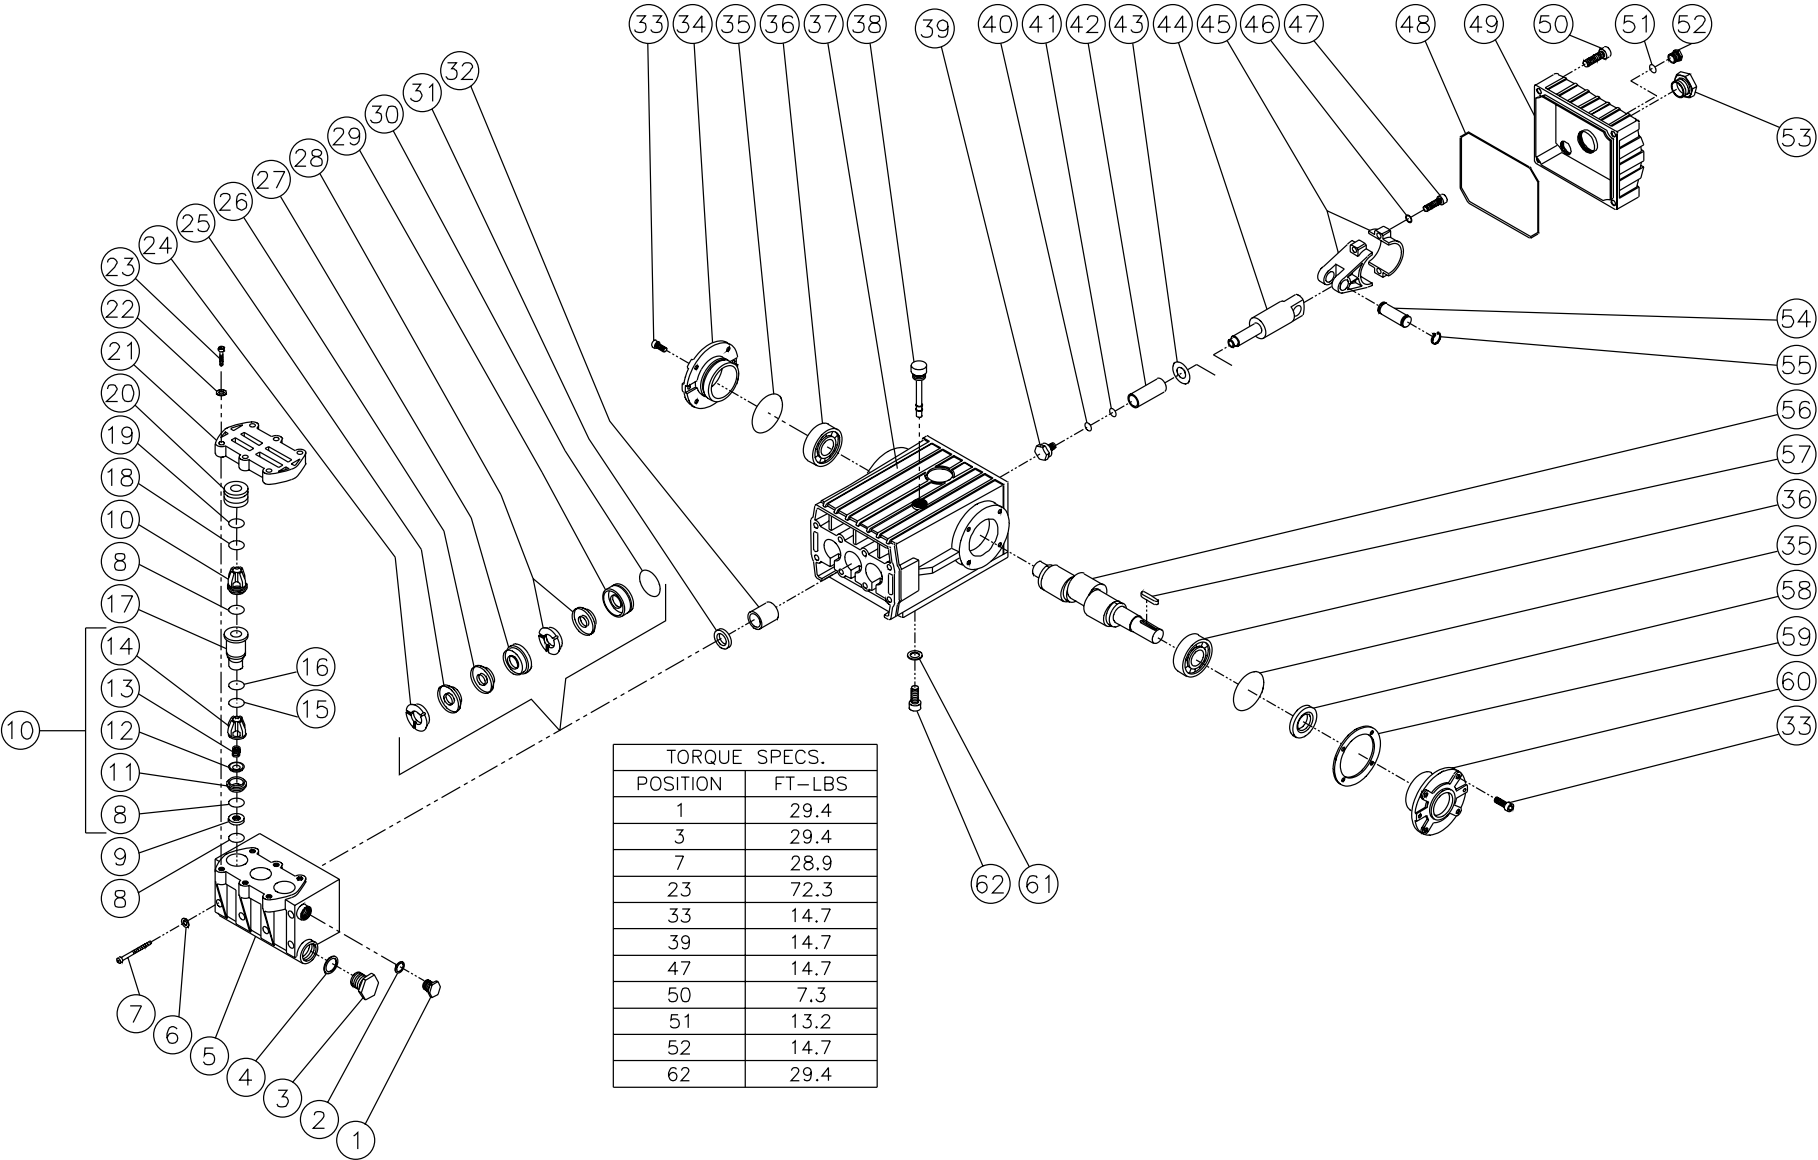

3-0169-050200-RD

PUMP ASSEMBLY (3-0169)											
REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.	REF. #	DESCRIPTION	PART #	QTY.
1	Plug	39-0018	1	24	High Pressure Head Ring (See 70-0211)	N/A Sep.	3	47	Bolt	27-8435	6
2	Washer	28-0600	1	25	High Pressure V-Packing (See 70-0211)	N/A Sep.	3	48	O-ring	25-0339	1
3	Plug	39-0019	1	26	V-Packing Support (See 70-0211)	N/A Sep.	3	49	Crankcase Cover	46-0295	1
4	Washer	28-0601	1	27	High Pressure Intermediate Seal Retainer (See 70-0211)	N/A Sep.	3	50	Bolt	27-8404	5
5	Manifold	46-0770	1	28	Low Pressure Seal (See 70-0211)	N/A Sep.	3	51	Oil Level Indicator	46-0114	1
6	Washer	28-0210	8	29	Low Pressure Seal Retainer	46-0286	3	52	Plug	39-0017	1
7	Bolt	27-8239	8	30	O-ring	25-0015	3	53	O-ring	25-0014	1
8	O-ring (See 70-0212)	N/A Sep.	8	31	Oil Seal (See 70-0208)	N/A Sep.	3	54	Connecting Rod Pin	43-0032	3
9	Spacer	46-0771	3	32	Bushing	9-0029	3	55	Retaining Ring	46-0103	6
10	Valve Assembly (Inc. 8, 11-14) (See 70-0212)	N/A Sep.	6	33	Bolt	27-8431	8	56	Crankshaft	46-0776	1
11	Valve Seat (See 70-0212)	N/A Sep.	6	34	Crankcase Cover- Closed	46-0336	1	57	Key	43-0048	1
12	Valve Plate (See 70-0212)	N/A Sep.	6	35	O-ring	25-0013	2	58	Oil Seal (See 70-0209)	N/A Sep.	1
13	Valve Spring (See 70-0212)	N/A Sep.	6	36	Bearing	48-0012	2	59	Shim	46-0113	1
14	Valve Cage (See 70-0212)	N/A Sep.	6	37	Crankcase	46-0292	1	60	Crankcase Cover- Open	46-0296	1
15	Back-up Ring	25-0430	3	38	Oil Dip Stick	46-0144	1	61	Lockwasher	29-0055	4
16	O-ring	25-0160	3	39	Piston Screw	46-0285	3	62	Bolt	27-8471	4
17	Guide	46-0772	3	40	Plunger	46-0337	3		Valve Assembly (6 each 10)	70-0212	
18	O-ring	25-0151	3	41	O-ring	25-0138	3		Head Ring Kit (3 each 24)	70-0031	
19	Back-up Ring	25-0431	3	42	Back-up Ring	25-0137	3		V-Packing Kit (3 each 25, 26, 28)	70-0042	
20	Cap	46-0773	3	43	Washer	46-0283	3		Oil Seal Kit (3 each 31)	70-0208	
21	Valve Cover Plate	46-0774	1	44	Piston Rod	46-0294	3		Oil Seal Kit (2 each 58)	70-0209	
22	Lockwasher	29-0156	6	45	Connecting Rod	46-0051	3		Intermediate Retainer (Inc. 24-30)	70-0210	
23	Bolt	27-8492	6	46	Lockwasher	29-0154	6		Packing Assembly (Inc. 24-30)	70-0211	


UNLOADER ASSEMBLY (8-0480)

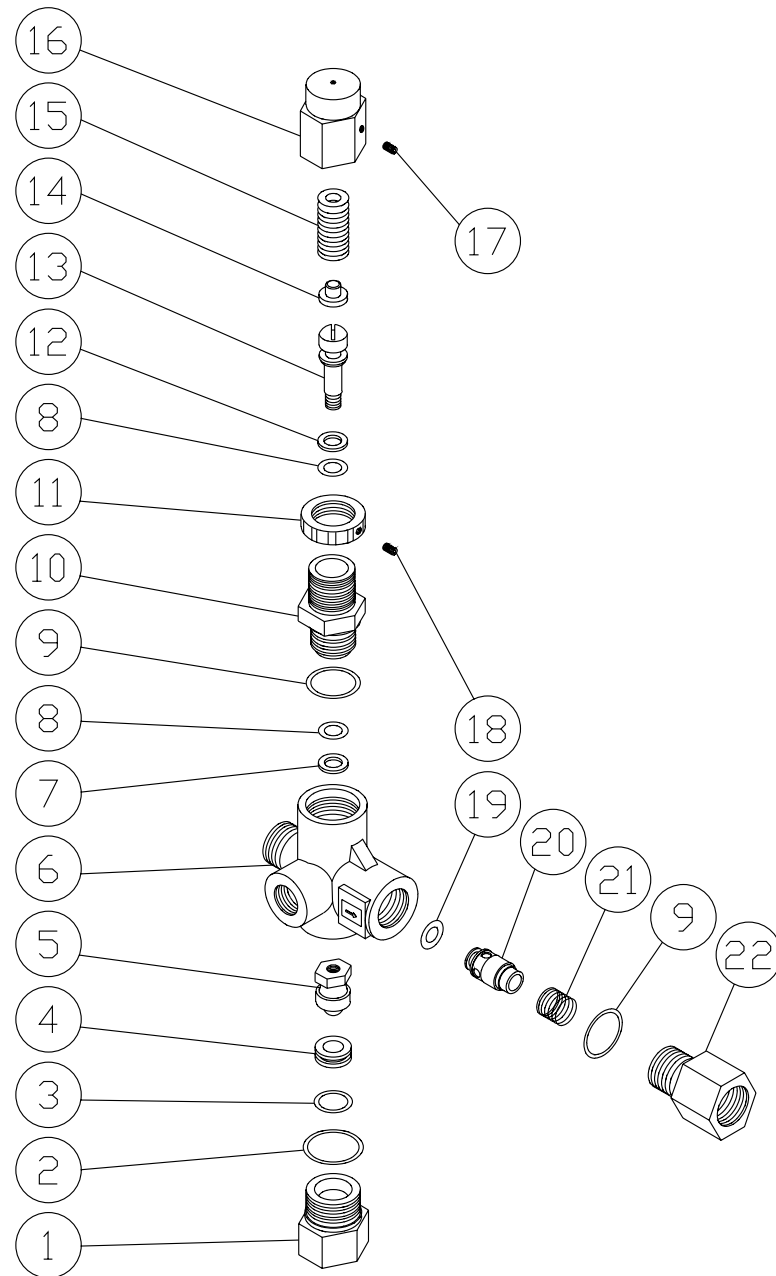

8-0480-053000-RD

UNLOADER ASSEMBLY (8-0480)			
REF. #	DESCRIPTION	PART #	QTY.
1	Bypass Cap	39-0083	1
2	O-ring (See 70-0207)	N/A Sep.	1
3	O-ring (See 70-0207)	N/A Sep.	1
4	Bypass Seat (See 70-0207)	N/A Sep.	1
5	Valve and Ball Assy. (See 70-0207)	N/A Sep.	1
6	Unloader Body	8-0481	1
7	Back-up Ring (See 70-0207)	N/A Sep.	1
8	O-ring (See 70-0207)	N/A Sep.	2
9	O-ring (See 70-0207)	N/A Sep.	2
10	Piston Retainer	8-0482	1
11	Locknut	30-6023	1
12	Back-up Ring (See 70-0207)	N/A Sep.	1
13	Piston Stem	8-0483	1
14	Spring Retainer	8-0484	1
15	Spring	49-0133	1
16	Adjustable Cap	39-0099	1
17	Set Screw	8-0485	1
18	Set Screw	8-0408	1
19	O-ring (See 70-0207)	N/A Sep.	1
20	Flow Balancer	8-0486	1
21	Spring	49-0118	1
22	Outlet Fitting	8-0487	1
	O-ring Kit (2-5, 7-9, 12, 19)	70-0207	
	Unloader Complete (Inc. 1-22)	8-0480	

BURST DISK ASSEMBLY (850-0308)

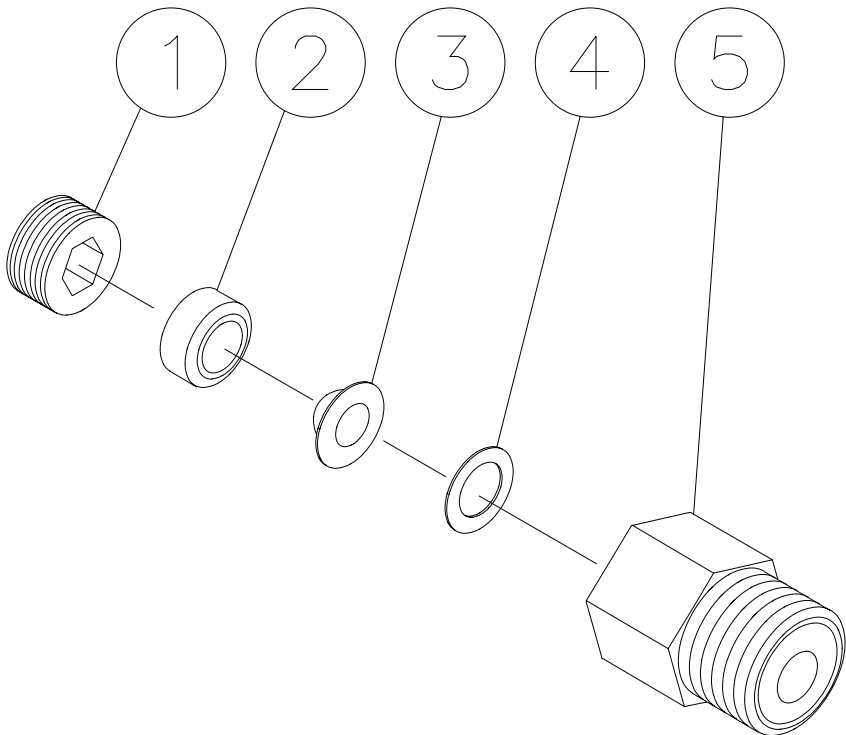


850-0197-850-0308-110397-BAR

BURST DISK ASSEMBLY (850-0308)			
REF. #	DESCRIPTION	PART #	QTY.
1	Set Screw	24-0137	1
2	Hold Down Ring	24-0136	1
3	Burst Disk - 8000 PSI	22-0218	1
4	Teflon Washer w/Burst Disk (See 850-0308)	N/A Sep.	1
5	Burst Disk Holder (See 850-0308)	N/A Sep.	1
	Complete Burst Disk Assembly (Inc. 1-5)	850-0308	

850-0197-110397-BAR


EASY START VALVE (22-0242)

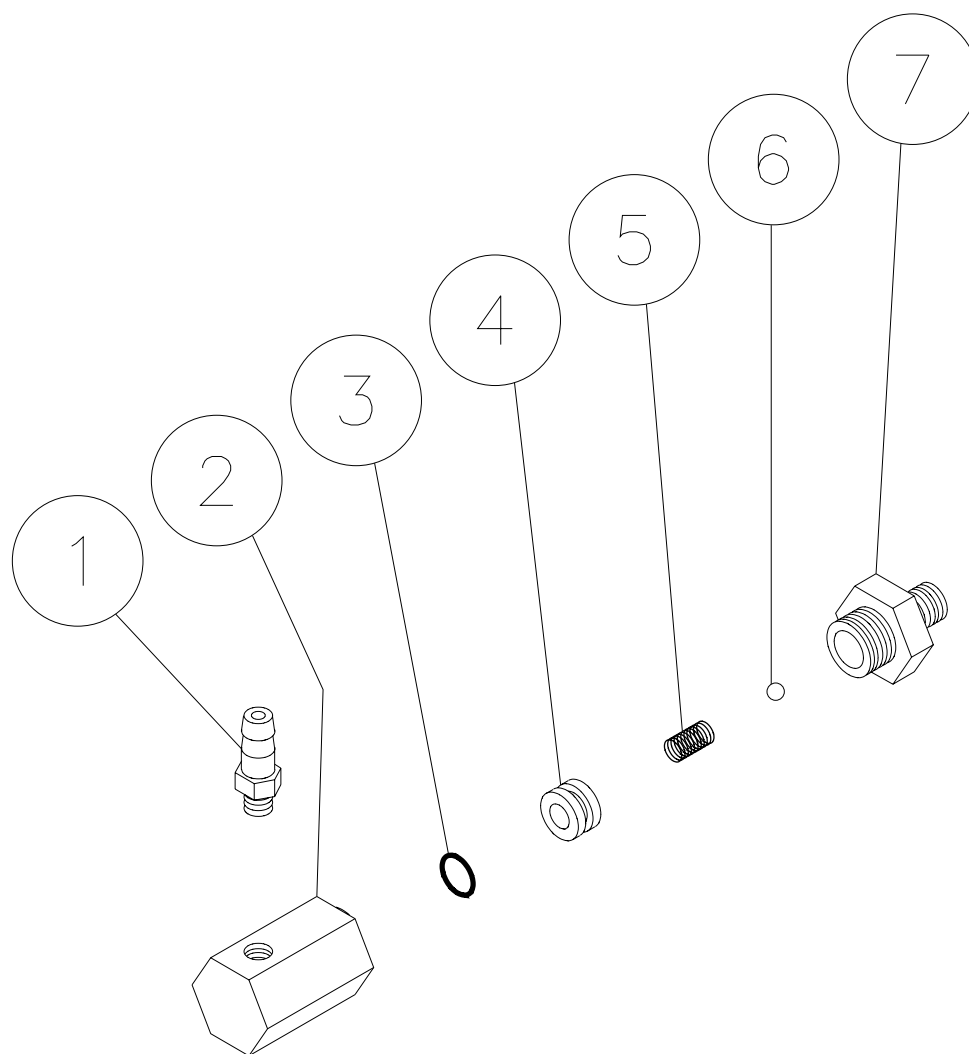

0MGEN267-052500-DCE

EASY START VALVE (22-0242)			
REF. #	DESCRIPTION	PART #	QTY.
1	Hose Barb	23-0141	1
2	Body-Easy Start	23-0337	1
3	O-ring	25-0366	1
4	Ball Seat	23-0338	1
5	Spring	49-0136	1
6	Ball-Check Valve	23-0339	1
7	Inlet Fitting	23-0340	1

GUN ASSEMBLY (16-0343)

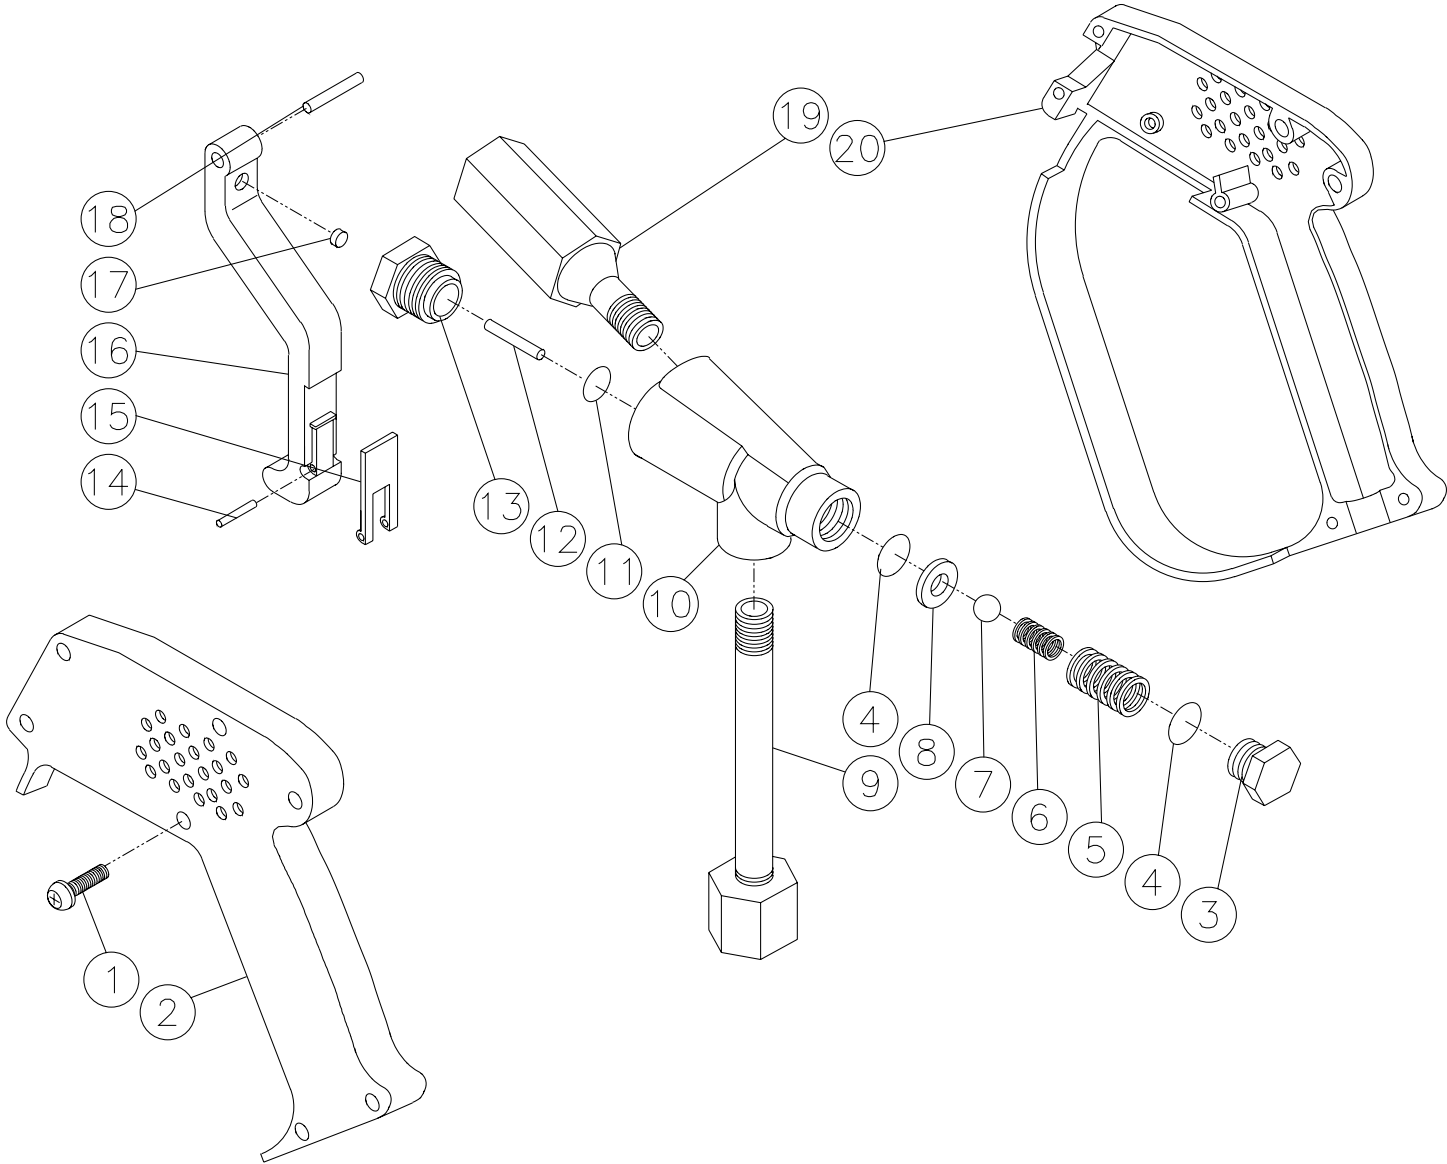


16-0343-042800-RD

GUN ASSEMBLY (16-0343)

REF. #	DESCRIPTION	PART #	QTY.		REF. #	DESCRIPTION	PART #	QTY.
1	Screw	27-8851	7		12	Control Pin (See 70-0213)	N/A Sep.	1
2	Housing- Left Side	16-0344	1		13	Guide Sleeve	16-0048	1
3	Cap	23-0336	1		14	Lock Pin	43-0025	1
4	O-ring (See 70-0213)	N/A Sep.	2		15	Safety Lock	16-0347	1
5	Spring (See 70-0213)	N/A Sep.	1		16	Trigger	16-0348	1
6	Valve Spring (See 70-0213)	N/A Sep.	1		17	Cam Trigger (See 70-0213)	N/A Sep.	1
7	Valve Ball (See 70-0213)	N/A Sep.	1		18	Pin	43-0024	1
8	Valve Seat (See 70-0213)	N/A Sep.	1		19	Discharge Tube Assembly	16-0349	1
9	Inlet Tube Assembly	16-0345	1		20	Housing- Right Side	16-0350	1
10	Valve Body	16-0346	1			Repair Kit (Inc. 4-8, 11, 12, 17)	70-0213	
11	O-ring (See 70-0213)	N/A Sep.	1					


VANGUARD ENGINE ASSEMBLY (851-0318)

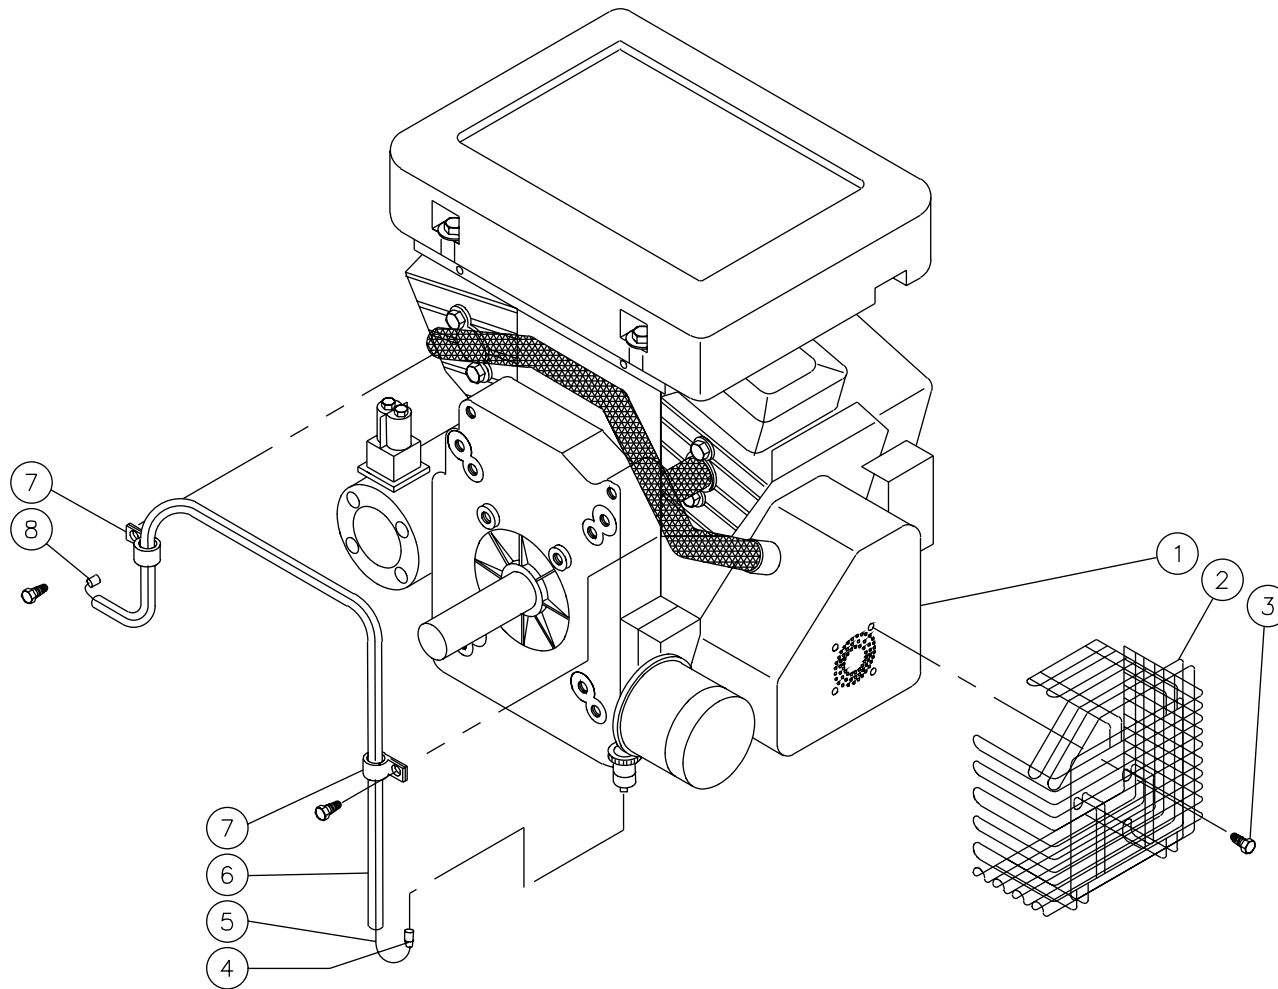

851-0318-051099-DCE


VANGUARD ENGINE ASSEMBLY (851-0318)			
REF. #	DESCRIPTION	PART #	QTY.
1	Engine-20.0 HP Vanguard	N/A Sep.	1
2	Muffler Guard	6-0065	1
3	Screw	27-3062	4
4	Terminal	32-0221	1
5	Wire *(Three Feet Required)	32-0092	1
6	Hose *(Two Feet Required)	15-0021	1
7	Clip	43-0003	2
8	Terminal Ring	32-0099	1

WIRING SCHEMATIC FOR HONDA ENGINE

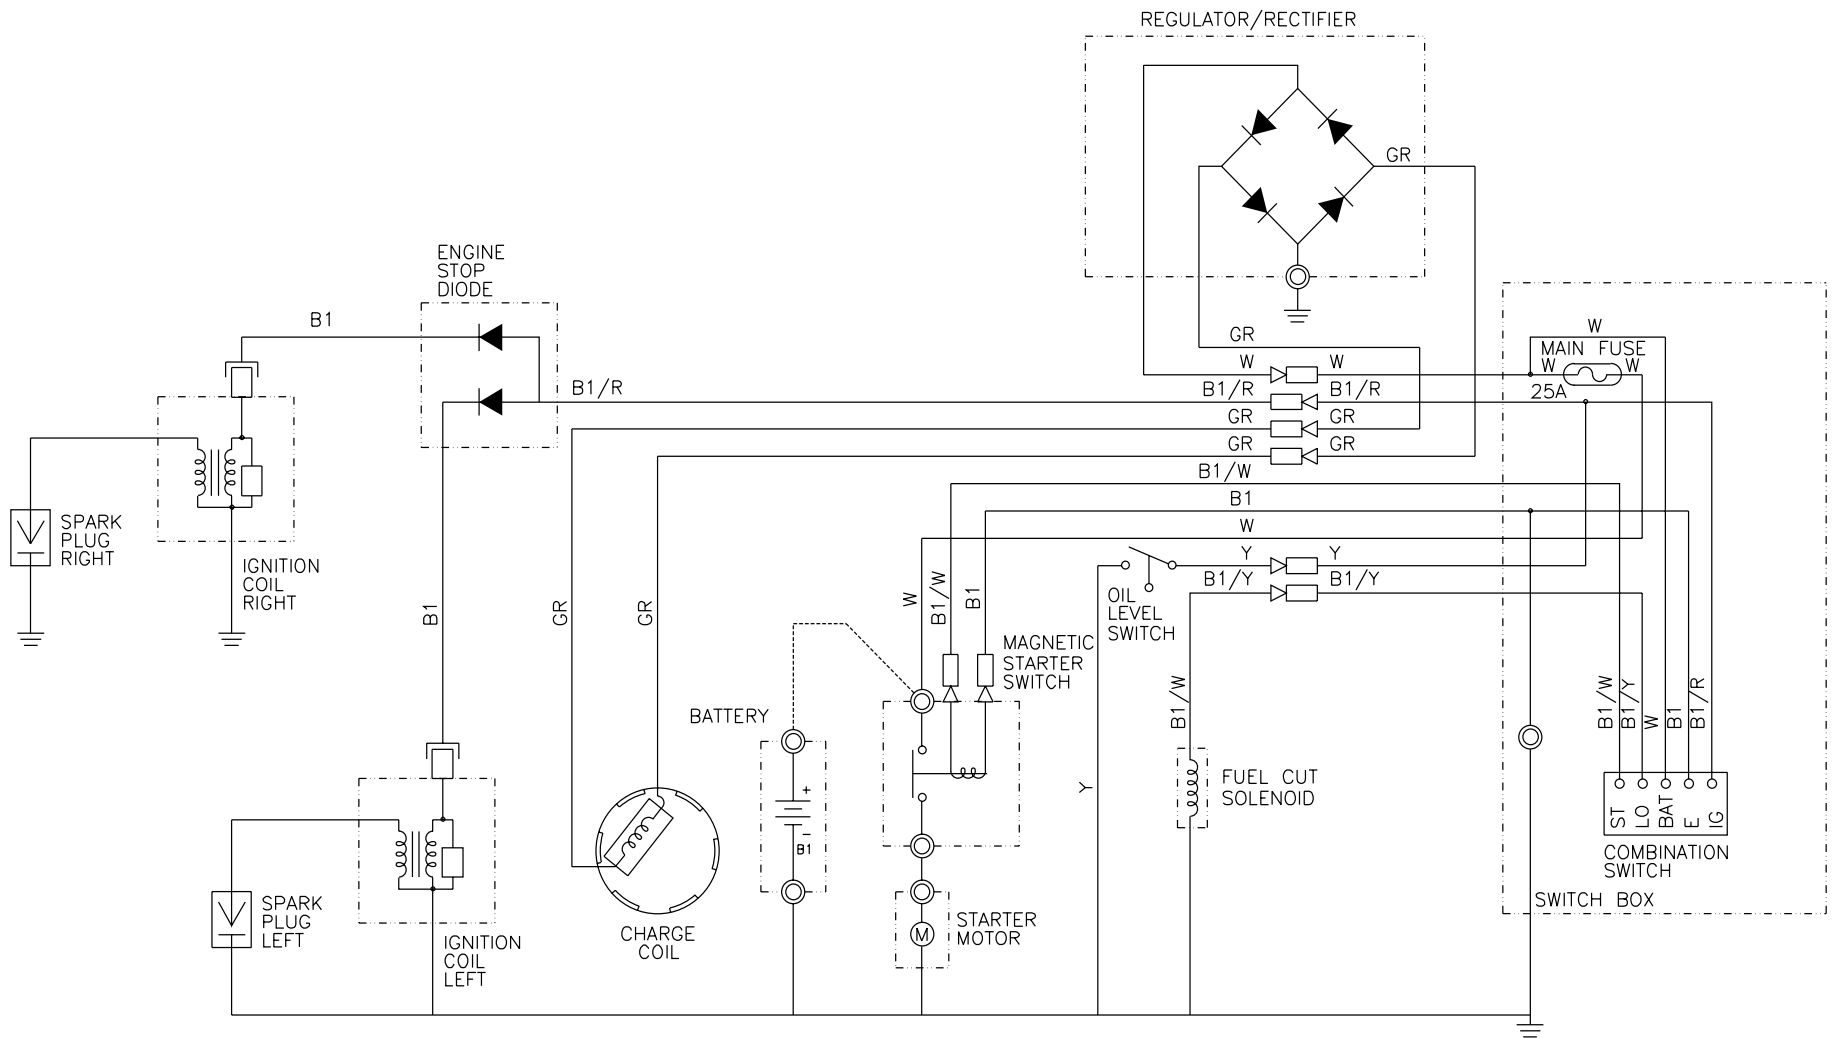


OMCWU245-100397-DCE

WIRING DIAGRAM FOR HONDA ENGINE

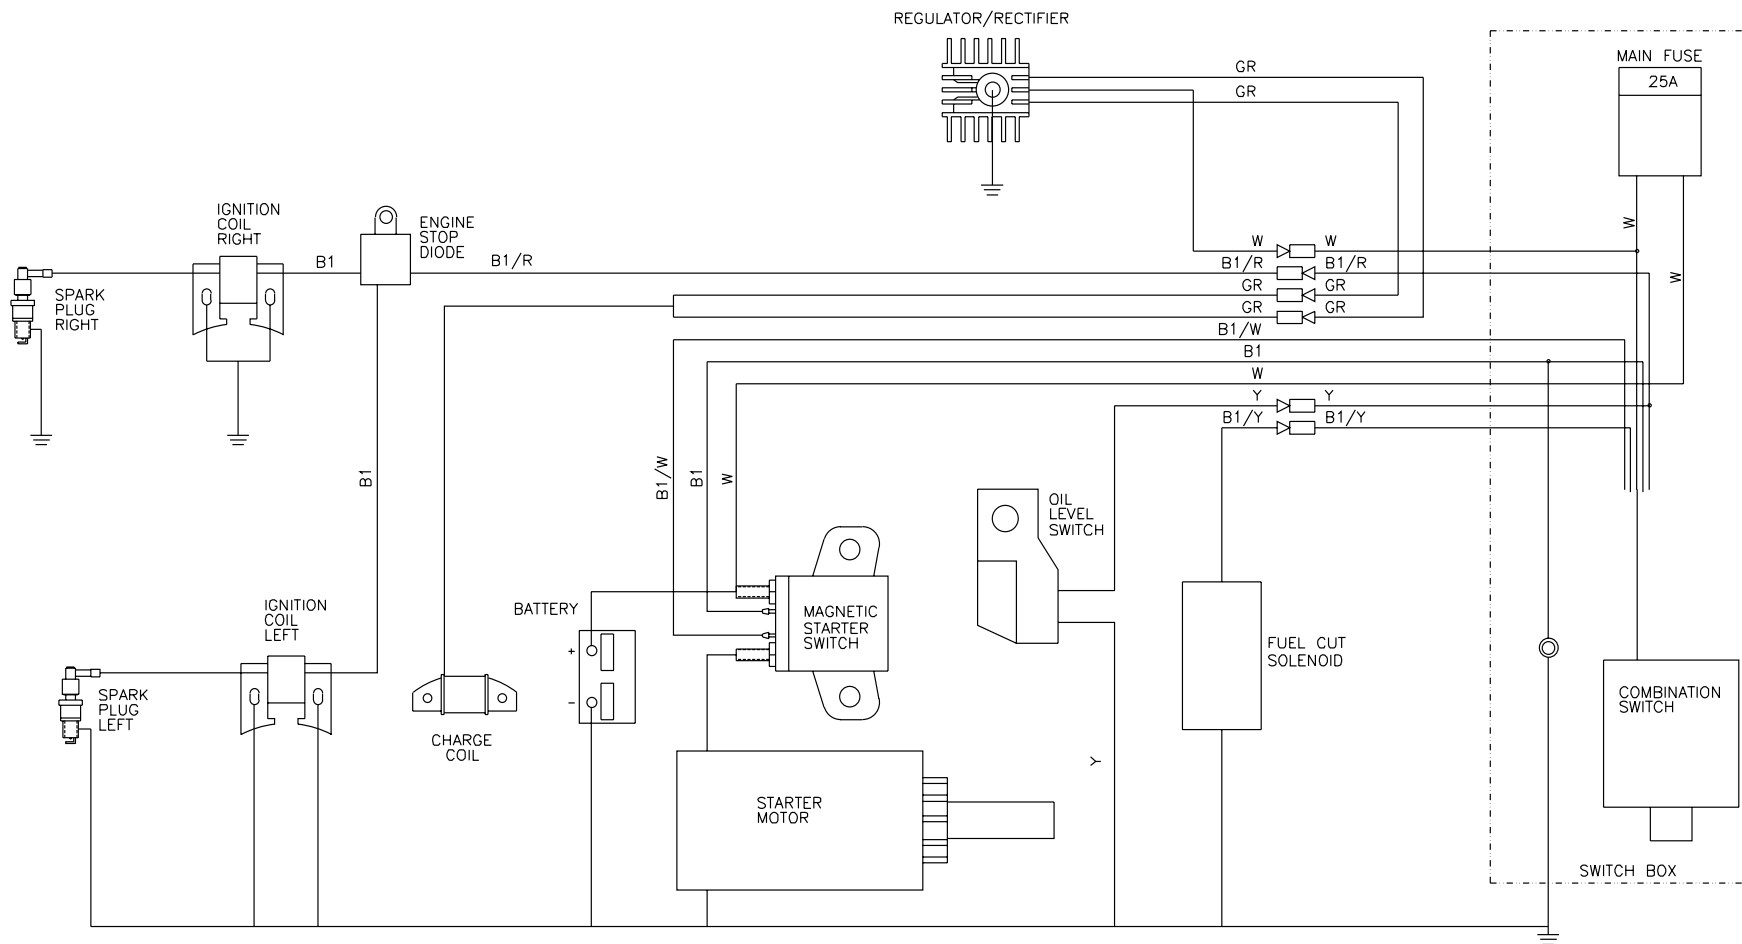


WIRING SCHEMATIC FOR VANGUARD ENGINES

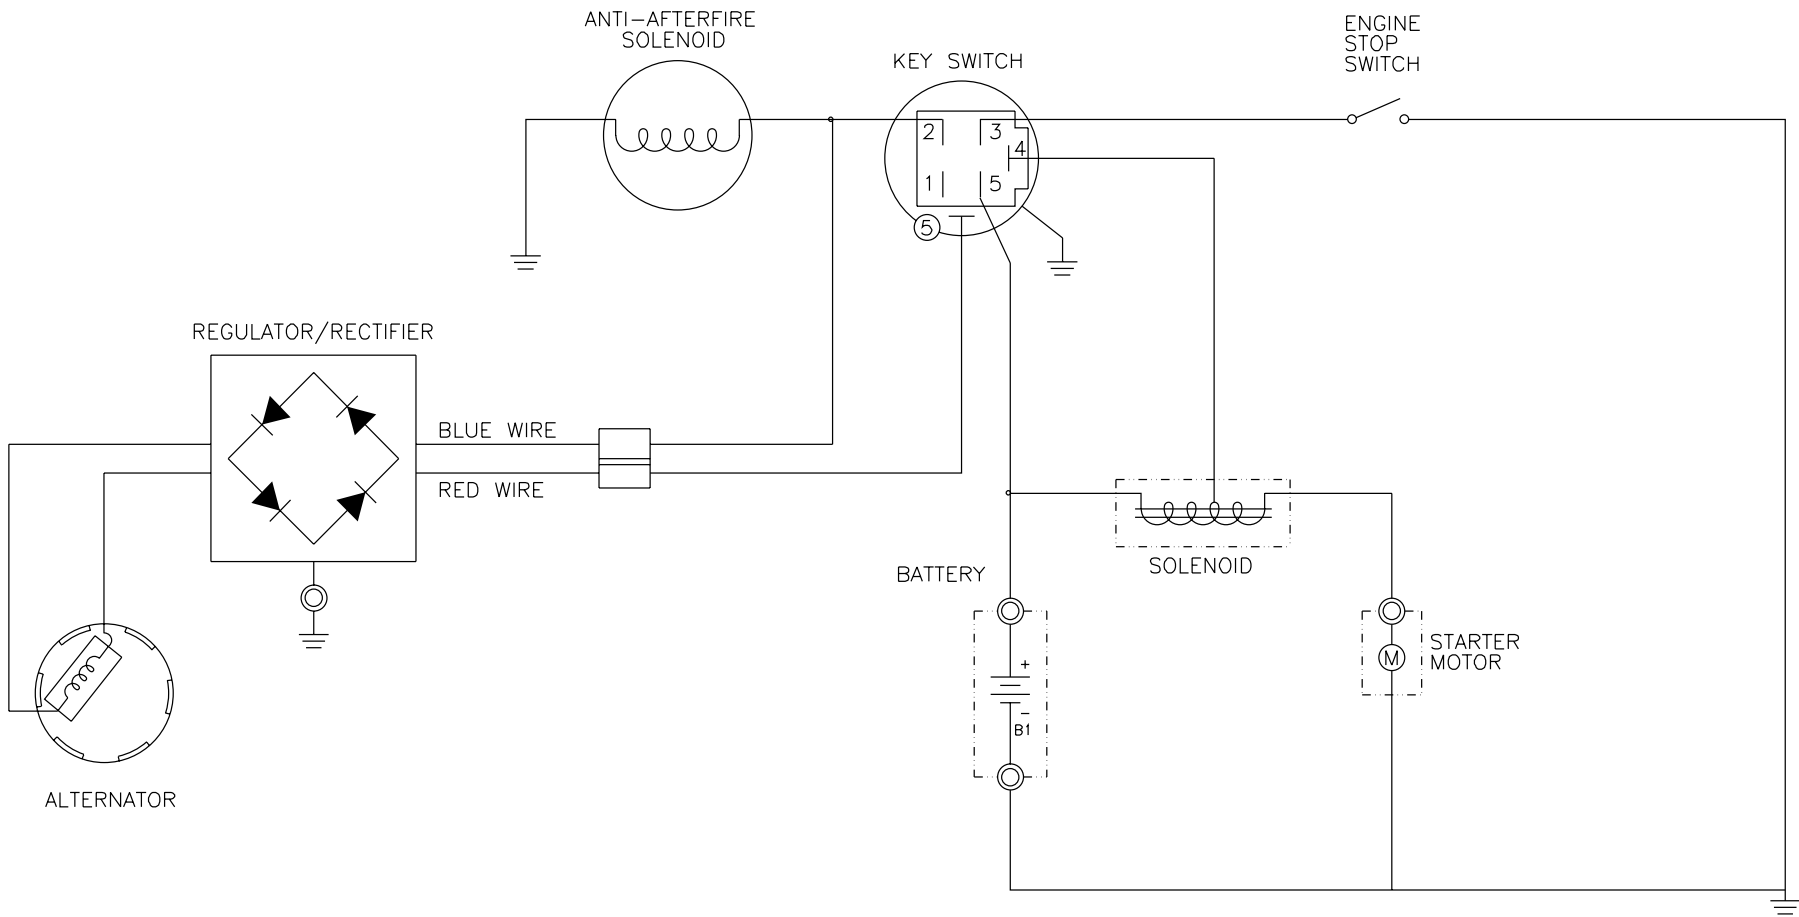

OMCWU246S-100397-DCE

WIRING DIAGRAM FOR VANGUARD ENGINES

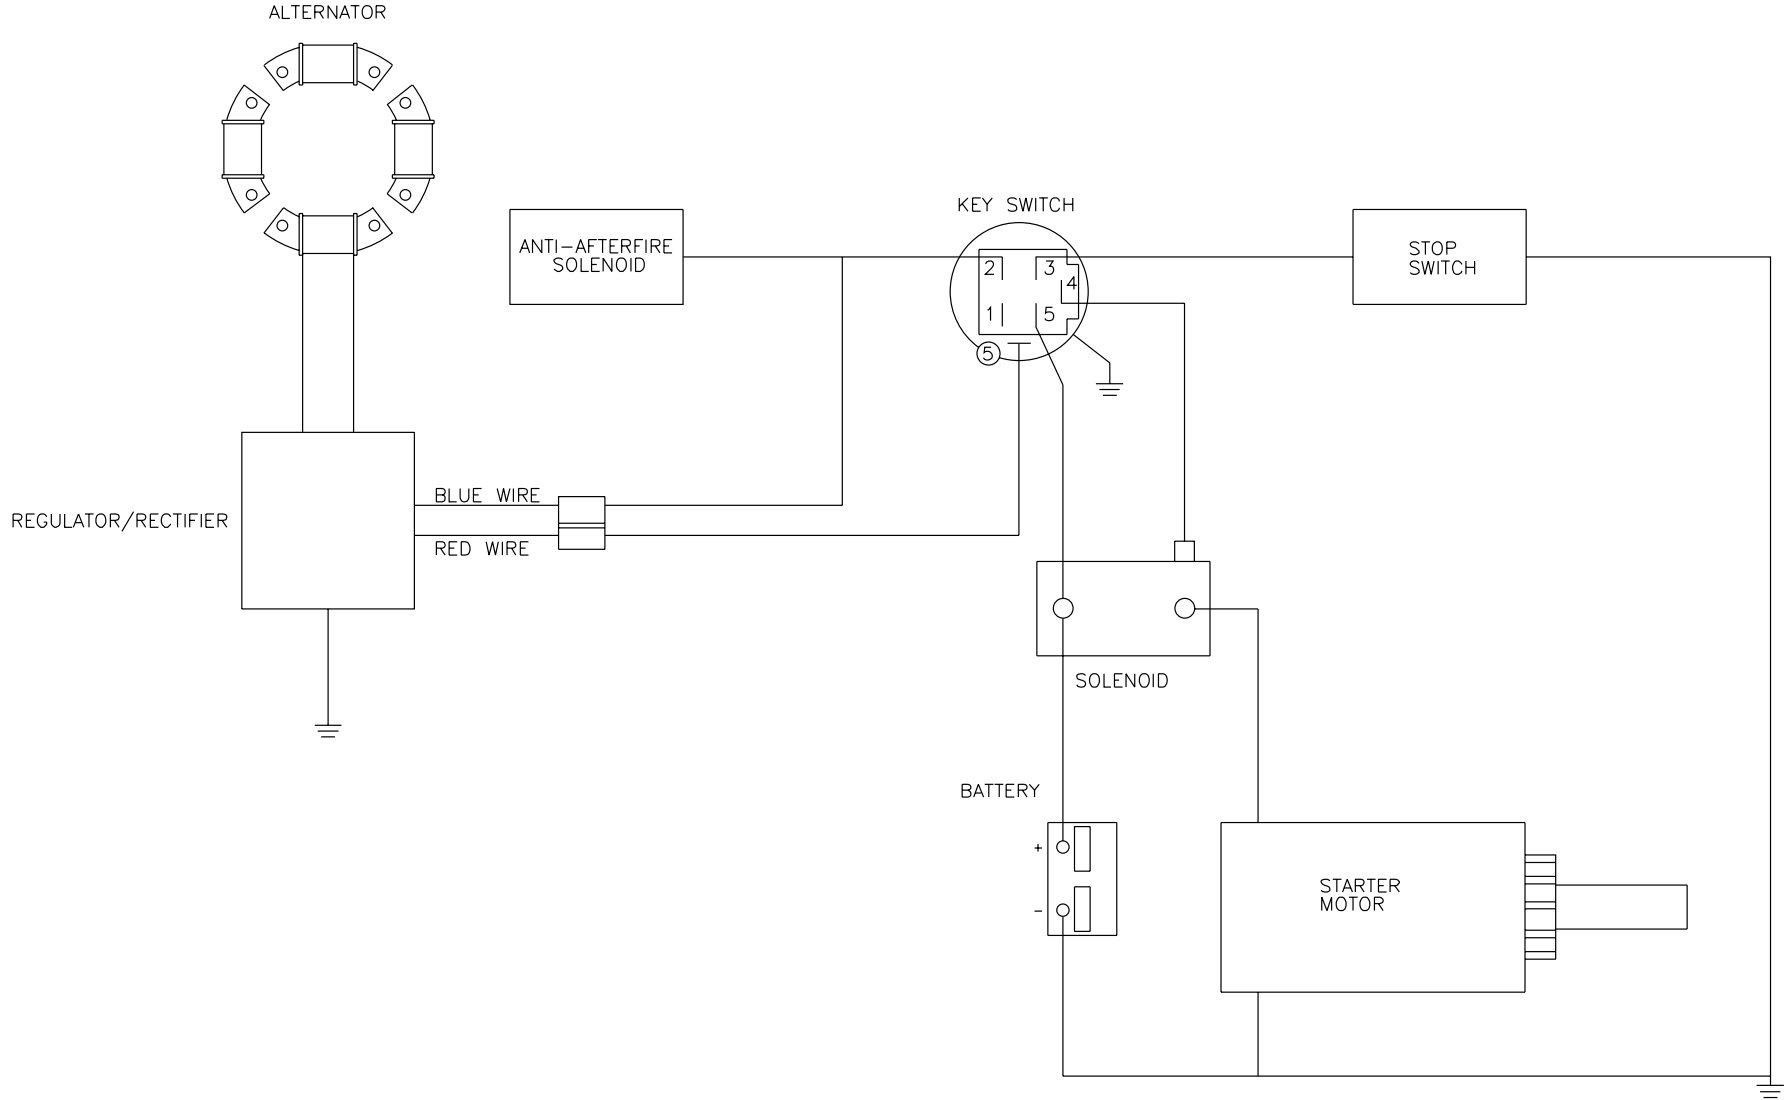

OMCWU246D-100397-DCE

